

Power Scrub Elite


User Guide




CWGDH012
hoover-mea.com

1 MACHINE OVERVIEW

- 1 Handle
- 2 Trigger (hidden)
- 3 Clean water/solution tank release button
- 4 Solution tank cap
- 5 Clean water tank cap
- 6 Clean water/solution tank
- 7 Wash/Rinse dial
- 8 Dirty water tank release latch
- 9 Quick cord release hook (hidden)
- 10 Dirty water tank
- 11 Dirty water tank release latch
- 12 Recline pedal (hidden)
- 13 Cleaning mode dial
- 14 Hose connector port
- 15 Solution tube connection port
- 16 On/Off pedal (hidden)
- 17 Nozzle
- 18 SpinScrub brushes

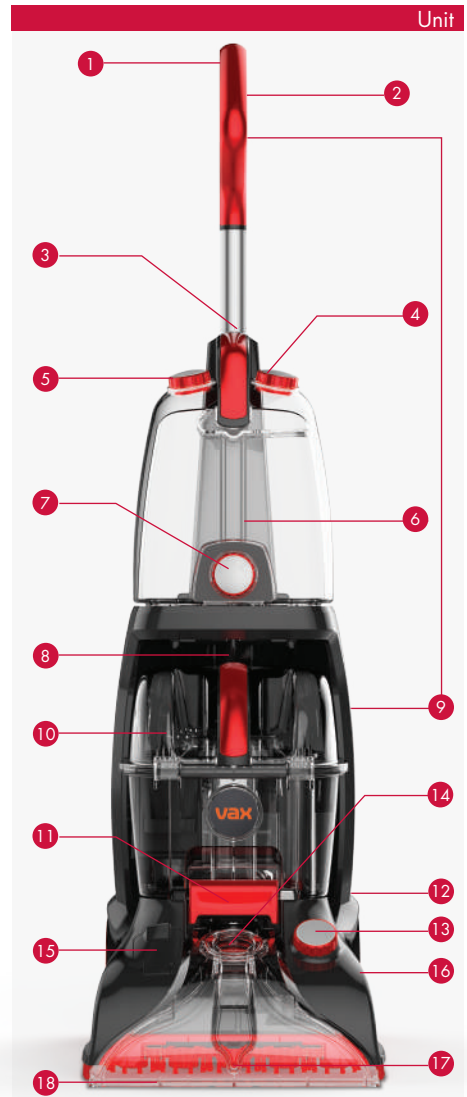


Accessories

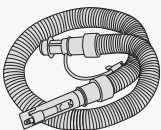


2.5m Hose



250ml Platinum Solution

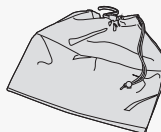

Accessory Bag



2 in 1 Antimicrobial Tool

GENERAL SAFETY INFORMATION 2

- 1 This carpet washer is intended for household use only and NOT for commercial or industrial use.
- 2 Only use the carpet washer indoors and keep the area you're cleaning well lit.
- 3 Keep fingers, hair and loose clothing away from moving parts and openings whilst using the carpet washer.
- 4 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 5 Before using the carpet washer test your carpets/rugs/upholstery for colourfastness and pile distortion.
- 6 Only Hoover recommended tools and solution should be used with this carpet washer. Using other solutions may invalidate the guarantee.
- 7 Don't leave the carpet washer plugged in when unattended.
- 8 Don't use the carpet washer if it has been dropped, damaged or left outdoors.
- 9 Don't run over the power cord or use the carpet washer if the power cord or plug is damaged. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 10 Don't use the carpet washer to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the carpet washer in an area with explosive vapours or liquid.
- 11 Don't handle the plug or use the carpet washer with wet hands.
- 12 Don't use the carpet washer to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).
- 13 Don't pull or carry the carpet washer by the power cord. Don't use the power cord as a handle, pull the power cord around corners, sharp edges or close a door over the power cord. Don't unplug carpet washer by pulling on the power cord.
- 14 Don't carry the carpet washer while it's switched on.
- 15 Don't attempt to remove blockages with sharp objects as this may cause damage to the carpet washer.
- 16 Don't use the carpet washer with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
- 17 Always vacuum your carpets thoroughly before using the carpet washer.
- 18 Check with the manufacturer of your flooring and always test in an inconspicuous area prior to using the carpet washer.
- 19 The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee.
- 20 Always unplug the carpet washer before carrying out any maintenance and before connecting or disconnecting the hose/accessories.
- 21 Turn off all controls on the carpet washer before disconnecting or connecting the power cord, after use always wrap the power cord around the cord clips provided.
- 22 Always replace the fuse in the plug with a British 13amp fuse. Always protect the power cable from heated surfaces or near open flames.
- 23 Take extra care when cleaning on the stairs.
- 24 Always keep the power cord away from the brushes whilst using the carpet washer.
- 25 Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- 26 Always use the carpet washer with all water/solution tanks and filters in place.
- 27 Always check accessories are free from damage, dirt and debris before use.
- 28 Keep all openings clear and free from debris as this may affect the airflow/suction.
- 29 Always use the carpet washer in an upright position. To prevent motor damage from dirty water, never hold the carpet washer upside down or on its side.
- 30 Store the carpet washer in a cool, dry area. Before storing the carpet washer please ensure all water/solutions tanks and filters are thoroughly clean and dry.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE.

3 OPERATION

PLEASE READ 'GENERAL SAFETY INFORMATION' AT THE BEGINNING BEFORE USE

IMPORTANT: Carpets should be dry vacuumed thoroughly before washing.

Test for colourfastness – Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. If your carpet has more than one colour, check all colours.

Test your carpet/rugs/upholstery – Run the carpet washer over a small hidden area. If no pile distortion occurs continue cleaning.

When cleaning an entire room, move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.

When using the carpet washer, basic safety precautions should always be observed and don't over saturate your carpets. Only use Hoover carpet solution. Using other solutions may cause excess foaming and will invalidate your guarantee. The clean water tank should only be filled with warm water (max 40°C). Filling the clean water tank with hot/boiling water will damage your machine and invalidate the guarantee. This is a powerful carpet washer, before plugging in make sure all controls are turned off. Hold carpet washer firmly when starting and during use.

Assembling your Carpet Washer



Line up the handle and slide onto the main body.



Insert the 2 screws and tighten using a cross head screwdriver.



Tilt the clean water/solution tank and line up onto the carpet washer. Push the tank back until it clicks into place.



Wrap the power cord around the cord hooks for storage.

CAUTION: Always unplug the carpet washer before performing any maintenance/troubleshooting checks. Always empty and rinse out the clean and dirty water tanks and leave to air dry before replacing. Do not leave solution stored in the tanks between uses.

IMPORTANT: Your dirty water tank is fitted with a float. When the dirty water tank is full, or the floorhead is not in contact with the carpet, the float will shut off the suction on the carpet washer. You will be able to hear if this has happened as the motor noise on the machine will increase. Once the float is activated, empty the dirty water tank if full. If the dirty water tank is not full then turn off your machine at the power switch and wait for the float to settle.

Using the carpet washer and cleaning modes

NOTE: Carpets should be dry vacuumed thoroughly before washing. For best overall results use in deep clean mode. For heavily soiled areas it may be necessary to repeat the cleaning process. Make crisscrossing strokes to the original pattern and overlap each pass.

Quick Clean Mode: Best for a quick, surface clean because carpets dry in about 45 minutes.

Deep Clean Mode: Best overall results for a thorough, deep clean.



Press the clean water/solution tank release button, pull and lift to remove the tank.



Twist the solution tank cap anti-clockwise to remove.



Pour Hoover carpet cleaning solution into the tank. Replace the cap.



Twist the water tank cap anti-clockwise to remove.




Fill the clean water tank with warm water (max 40°C). Replace the cap before refitting the tank.



Tilt the clean water/solution tank and line up onto the carpet washer. Push the tank back until it clicks into place.



Choose the cleaning mode by turning the dial on the base.
Quick Clean Mode: Best for a quick, surface clean with carpets drying in about 45 minutes.
Deep Clean Mode: Best overall results for a thorough, deep clean.

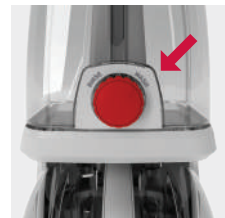

Turn the wash/rinse dial to 'wash'. The SpinScrub brushes deep clean your carpets with water and detergent removing dirt and stains.

5 OPERATION




Plug into the mains, press the on/off pedal to switch on.



Press the recline pedal and pull the handle backwards.



Squeeze the trigger to release solution and water mix.

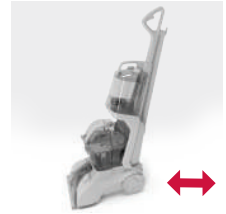


For best results apply water/solution on the forward stroke and release the trigger to pick up water/solution on the backward stroke. Follow with a slow additional dry stroke without the trigger pressed for a dryer finish.

Using Rinse mode



Turn the wash/rinse dial to rinse. Only water is released to remove solution residue.

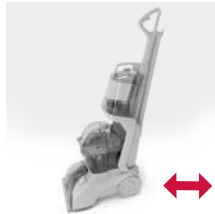

For best results apply water on the forward stroke and release the trigger to pick up water on the backward stroke. Follow with a slow additional dry stroke without the trigger pressed for a dryer finish.

NOTE: For best cleaning results use **slow** straight parallel strokes. Intermittent dry forward strokes will increase water pick up.

CAUTION: Test for colourfastness – Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. If your carpet has more than one colour, check all colours.

IMPORTANT: The carpet washer should be in the upright position when using the hose and tools; de-activating the SpinScrub brushes and brushbar. Do not place the washer at top of stairs to avoid it falling down stairs. Place washer at bottom of stairs and work up.


Using the hose and tool



Pour Hoover carpet cleaning solution into the solution side of the tank.




Fill the clean water tank with warm water (max 40°C).

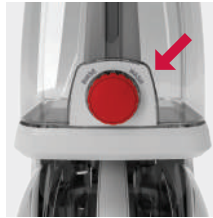

Turn wash/rinse dial to wash.



Open the hose connector cover.

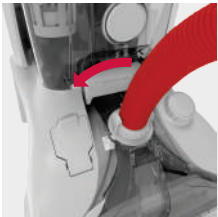

Line up the arrow on the hose with the arrow on the washer and push the hose into position. Rotate the hose clockwise to lock into place.



Pull to open the solution tube connector cover and push the solution tube firmly onto the port.



Attach the tool.



Slide the tool over the tab at the end of the hose until it clicks into place.




Plug into the mains and press the on/off pedal to switch on.

NOTE: Use the carpet washer or hose to pick up spills before washing and cleaning the area.

7 OPERATION



Press the trigger on the hose to release solution/water.

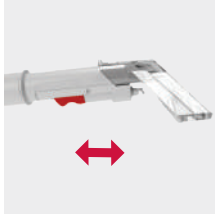

Squeeze the trigger on the forward stroke, release the trigger on the backward stroke to pick up solution/water. Follow with a slow additional dry stroke without the trigger pressed for a dryer finish.



To remove the tool, lift and push the tool clip over the tab at the end of the hose and pull to remove.


Using Rinse mode on the hose



Turn the wash/rinse dial to rinse. Only water is released to remove solution residue.



Press the trigger on the hose to release water.

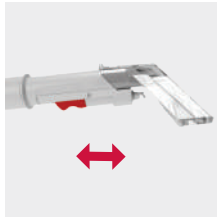


Squeeze the trigger on the forward stroke, release the trigger on the backward stroke to pick up water. Follow with an additional dry stroke without the trigger pressed for a dryer finish.

CAUTION: Always unplug the carpet washer before performing any maintenance/troubleshooting checks.

Emptying and cleaning the dirty water tank

IMPORTANT: Always empty and rinse out clean and dirty water tanks and leave to air dry before replacing. Do not leave solution stored in the tanks between uses.

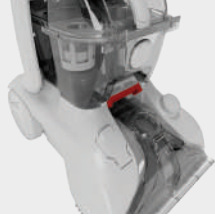

Lift the tank release clip and unhook from the front of the dirty water tank.




Use the handle to lift and remove the dirty water tank.




For emptying mid clean, pull the quick spout pour cap to open. Pour the dirty water into the sink. Always make sure the spout is fully closed before refitting to the washer.



For emptying at the end of a clean, lift and unhook the latch on the tank and lift to remove the lid.

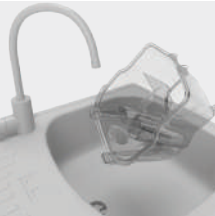

Empty the dirty water over the sink. Rinse the dirty water tank and lid under water (40°C max) to remove dirt/debris.

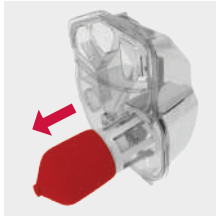

Remove the filter from under the dirty water tank lid. Wash under water (40°C max) to remove dirt and debris and allow to dry for 24 hours before refitting.



To replace the lid, slide the tabs on the back of the lid into the tabs on the tank and close in a hinge line manner.


IMPORTANT: Not correctly refitting the quick pour spout or dirty water tank lid will result in poor dirty water pick up.



Lift and hook the latch on the tank onto the lid and push down to lock into place.



To re-fit, slide the dirty water tank onto the carpet washer, making sure the tabs on the tank line up with the back of the washer.

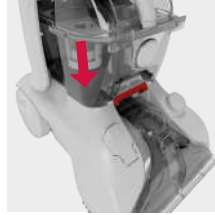

Hook the tank release catch over the front of the tank and push downwards to lock the catch in place.

Removing and cleaning the nozzle



Remove both tanks and tilt the carpet washer so it is lying on its back.




Lift the nozzle release clip to unlock the nozzle.



Hold the front of the nozzle and push down to release the nozzle away from the washer. Once released, lift to remove.



Rinse the nozzle under water (40°C max) to remove dirt and debris.

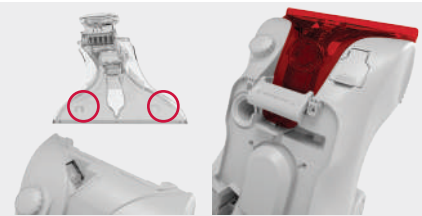

To replace the nozzle, hook the tabs on the nozzle with the front of the carpet washer and slide the nozzle into place.



Push the nozzle release clip to lock the nozzle.


NOTE: To prevent excessive build up of dirt/debris in the nozzle, always dry vacuum before using the carpet washer.

CAUTION: Always unplug the carpet washer before performing any maintenance/troubleshooting checks.


Cleaning the SpinScrub brushes



Remove the tanks and lie the washer on its back exposing the SpinScrub brushes.

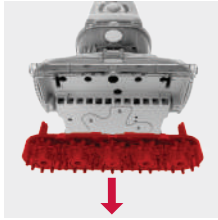


Firmly pull the sides of the SpinScrub brushes to remove.

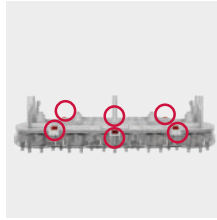


Depress the clips to release the SpinScrub cover and firmly pull the cover to remove.



The SpinScrub brushes can be removed and cleared of any debris/threads or hair. Rinse under water to remove debris.

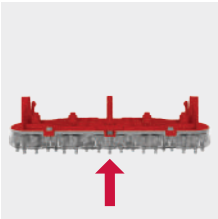

Leave the brushes to fully dry before reassembling. Push the cover onto the clips until they click into place.

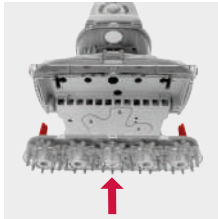

Line up the spindle and tabs on the side of SpinScrub brushes into carpet washer, push firmly until it clicks into place.

11 MAINTENANCE

IMPORTANT: A blocked/dirty SpinScrub filter will cause the SpinScrub brushes to slow.

Cleaning the SpinScrub filter



Remove both tanks and tilt the carpet washer so it is lying on its back.



Lift the nozzle release clip to unlock the nozzle.



Hold the front of the nozzle and push down to release the nozzle away from the washer, once released lift to remove.



Wipe any dirt and debris from the mesh filter.

CAUTION: To reduce the risk of personal injury, unplug the carpet washer before performing maintenance/troubleshooting checks.

Is there an accessory missing?

- Check the contents panel on the box to make sure the part is definitely included with this carpet washer.

Why won't the carpet washer turn on?

- The plug may not be fully pushed into the electrical socket.

Why won't the solution/clean water dispense?

- Make sure the clean water tank is fitted securely. Go to 'Operation'.
- Squeeze the trigger on the handle to release solution and water mix. Go to 'Operation'.
- Water/solution tank is empty, refill. Go to 'Operation'.
- Wash/Rinse dial has been set to 'rinse'. Set dial to 'wash' to dispense solution.
- The clean water tank valve may be stuck. Hold the clean water tank over the sink and press the valve underneath to release.

Why won't the carpet washer pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before re-starting your carpet washer.
- The hose connector cover has not been correctly closed. Correctly close cover.
- The dirty water tank may not be fitted correctly. Re-fit making sure the lid is pushed down securely. Go to 'Maintenance'
- Check the nozzle for blockages and clear. Go to 'Maintenance'.
- Check the nozzle is correctly fitted. Go to 'Maintenance'.

Why won't the brushes spin?

- The brushes will only spin when the carpet washer is reclined.
- Check the SpinScrub brushes and brushbar for blockages and clear.
- Check for damage to the brushbar and the spindle on the back of the SpinScrub brush.
- The SpinScrub filter is blocked, wipe clean. Go to 'Maintenance'.

13 OTHER INFORMATION

Service and Help

If you have any queries or concerns about using your Hoover carpet washer, simply visit hoover-mea.com

Consumables

To purchase spares and accessories, please visit hoover-mea.com

The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specification

Voltage 220-240V - 50/60Hz

Wattage 1200W

Cord length 8m

Weight 8.4kg

Subject to technical change without notice.

© 2018 Techtronic Floor Care Technology Ltd

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.







الخدمة والمساعدة

إذا كانت لديك أي تساؤلات أو مخاوف متعلقة باستخدام غسالة السجاد من هوفر، فتفضل بزيارة الموقع الإلكتروني hoover-mea.com

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: hoover-mea.com. إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

المواصفات الفنية

الجهد 220-240 فولت - 60/50 هرتز

القدرة بالواط 1200 واط

طول السلك 8 م

الوزن 3 كجم

هذه المواصفات عرضة للتغيير الفني بدون إشعار.

© 2018 Techtronic Floor Care Technology Ltd

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية. الرجاء إعادة التدوير إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) وأو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة يجب الخلط بينها وبين النفايات المنزلية العامة. للحصول على المعالجة والاسترداد وإعادة التدوير بشكل صحيح، من فضلك خذ هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ويمنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة والتي قد تنشأ نتيجة التعامل الخاطيء مع النفايات. الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



تنبيه: للحد من مخاطر الإصابة الشخصية، أفضل غسالة السجاد قبل إجراء فحوصات الصيانة / استكشاف الأخطاء وإصلاحها.

هل هناك قطعة ملحقة مفقودة؟

- افحص لوحة المحتويات في الصندوق للتأكد من أن القطعة موجودة بالتأكيد مع غسالة السجاد هذه.

لماذا لن يتم تشغيل غسالة السجاد؟

- ربما لا يكون القابس مدفوعًا تمامًا في المقبس الكهربائي.

لماذا لا يتم توزيع المحلول / الماء التنظيف؟

- تأكد من تركيب خزان الماء التنظيف بشكل محكم. انتقل إلى قسم "التشغيل".
- اضغط على زر التشغيل على المقيض لإطلاق مزيج المحلول الماء. انتقل إلى قسم "التشغيل".
- خزان الماء / المحلول فارغ، أعد تعبئته. انتقل إلى قسم "التشغيل".
- تم ضبط قرص الغسيل / الشطف على وضع "الشطف". اضبط القرص على وضع "الغسيل" لتوزيع المحلول.
- قد يكون صمام خزان الماء التنظيف عالقًا. أمسك خزان الماء التنظيف فوق الحوض واضغط على الصمام الموجود أسفل لتحريره.

لماذا لن تقوم غسالة السجاد بالالتقاط؟

- ربما تم تشييط العوامة الموجودة في خزان الماء المتسخ. قم بتفريغ خزان الماء المتسخ وانتظر حتى تستقر العوامة قبل إعادة تشغيل غسالة السجاد.
- لم يتم إغلاق غطاء موصل الخرطوم بشكل صحيح. أغلق الغطاء بشكل صحيح.
- ربما لم يتم تركيب خزان الماء المتسخ بشكل صحيح. أعد تركيبه مع التأكد من دفع الغطاء لأسفل بشكل محكم. انتقل إلى "الصيانة".
- تحقق من عدم وجود انسدادات في الفوهة وإذا وجدت قم بإزالتها. انتقل إلى قسم "الصيانة".
- تأكد من تركيب فوهة بشكل صحيح. انتقل إلى قسم "الصيانة".

لماذا لا تدور الفرش؟

- تدور الفرش فقط عند إمالة غسالة السجاد.
- قم بفحص فرش SpinScrub وقصيب الفرش للتأكد من عدم وجود انسدادات، وإذا وجد تخلص منها.
- تحقق من أي تلف في قصيب الفرش وعمود الدوران في ظهر فرشاة SpinScrub.
- في حالة انسداد مرشح SpinScrub، امسحه لتنظيفه. انتقل إلى قسم "الصيانة".

معلومة مهمة: سيؤدي مرشح SpinScrub المسدود/المليء بالأوساخ إلى إبطاء فرش SpinScrub.

تنظيف مرشح SpinScrub



امسح أي أوساخ ورواسب من المرشح الشبكي.



أمسك مقدمة الفوهة واضغط لأسفل لتحرير الفوهة بعيداً عن الغسالة.



قم برفع مشبك تحرير الفوهة لفتح الفوهة.




قم بفتح كلا الخزانين مع إمالة غسالة السجاد على ظهرها.

تنبيه: قمر دائماً بفصل غسالة السجاد قبل إجراء أي فحوصات الصيانة / استكشاف الأخطاء وإصلاحها.


تنظيف فرش SpinScrub



يمكن فك فرش SpinScrub وتنظيفها من أي رواسب/خيوط أو شعر. لإزالة الرواسب قمر بالشطف تحت الماء.

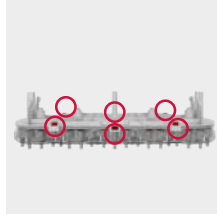


اضغط على المشابك لتحرير غطاء فرش SpinScrub وقمر بسحب الغطاء لفكه.

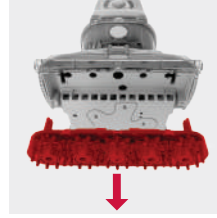


قمر بسحب جوانب فرش SpinScrub بإحكام لفكها.




قمر بفك الخزانات مع إمالة الغسالة على ظهرها لكشف فرش SpinScrub.

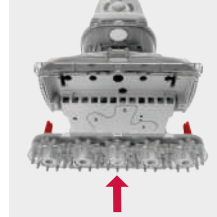

قمر بمحاذاة عمود الدوران والأكسنة على جانب فرش SpinScrub في غسالة السجاد، واضغط بقوة حتى يتم تثبيتها في مكانه.

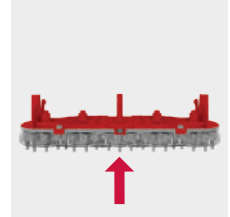


اترك الفرش لتجف تماماً قبل إعادة التجميع. اضغط الغطاء على المشابك حتى يتم تثبيتها في مكانها.

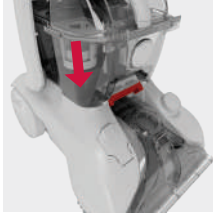

ثبت مزلاج تحرير الخزان على الجزء الأمامي من الخزان وقم بضغطه لأسفل لتثبيت المزلاج في مكانه.



لإعادة التركيب، أدخل خزان الماء المتسخ على غسالة السجاد، مع التأكد من أن الأسننة الموجودة بالخزان تتوازي مع الجزء الخلفي من الغسالة.

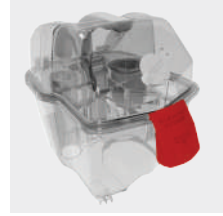

ارفع وثبت المزلاج الموجود في الخزان على الغطاء واضغط لأسفل لتثبيته في مكانه.

فك الفوهة وتنظيفها



قم بشطف الفوهة تحت الماء (40 درجة مئوية كحد أقصى) للتخلص من الأوساخ والرواسب.



أمسك مقدمة الفوهة واضغط لأسفل لتحرير الفوهة بعيداً عن الغسالة. بمجرد تحريرها، ارفعها لفتحها.



قم برفع مشبك تحرير الفوهة لفتح الفوهة.



قم بفك كلا الخزائين مع إمالة غسالة السجاد على ظهرها.



اضغط على مشبك تحرير الفوهة لتثبيت الفوهة.



لإعادة تركيب الفوهة، قم بتثبيت الأسننة على الفوهة بالجزء الأمامي من غسالة السجاد ثم أدخل الفوهة في مكانها.

ملاحظة: لمنع التراكم الزائد للأوساخ/الرواسب في الفوهة، قم دائماً بدفع الهواء الجاف بداخلها قبل استخدام غسالة السجاد.

8: الصيانة

تنبيه: قم دائماً بفصل غسالة السجاد قبل إجراء أي فحوصات الصيانة / استكشاف الأخطاء وإصلاحها.

تفريغ وتنظيف خزان الماء المتسخ

معلومة مهمة: قم دائماً بفصل غسالة السجاد قبل إجراء أي فحوصات الصيانة / استكشاف الأخطاء وإصلاحها.



للتفريغ بعد الانتهاء من التنظيف،
قم برفع وفصل المزلاج الموجود على
الخزان وارفعه لفك الغطاء.



لتفريغه في منتصف عملية التنظيف،
اسحب غطاء صنوبر السكب السريع
لفتحه. اسكب الماء المتسخ في الحوض.
تأكد دائماً من إغلاق الصنوبر تماماً قبل
إعادة تركيبه بالغسالة.




استخدم المقيض لرفع خزان الماء
المتسخ وفكه.



ارفع مشبك تحرير الخزان وفكه من
الجزء الأمامي لخزان الماء المتسخ.



لإعادة تركيب الغطاء، أدخل الإصبع
الموجودة على الجزء الخلفي من
الغطاء في الإصبع الموجودة على
الخزان وإغلاقها مع الحفاظ على
اتصال المفصلات.

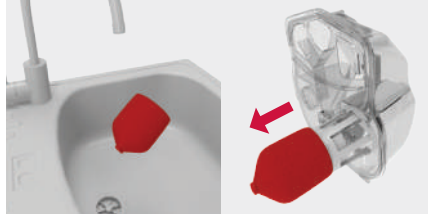

قم بفك المرشح أسفل غطاء خزان الماء المتسخ. اغسله تحت الماء
(40 درجة مئوية كحد أقصى) للتخلص من الأوساخ والرواسب واتركه ليجف
لمدة 24 ساعة قبل إعادة تركيبه.




قم بتفريغ الماء المتسخ فوق
الحوض. اشطف خزان الماء المتسخ
والغطاء تحت الماء (40 درجة مئوية
كحد أقصى) للتخلص من الأوساخ /
الرواسب.


معلومة مهمة: يؤدي إعادة تركيب صنوبر السكب السريع أو غطاء خزان الماء المتسخ بشكل خاطئ إلى ضعف أداء التقاط الماء المتسخ.



لفك الأداة، ارفع وادفع مشبك تثبيت الأداة على اللسان الموجود في نهاية الخرطوم ثم اسحبها. كي يتم خلعه.

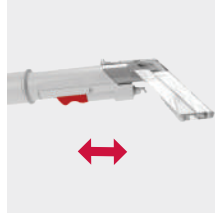


اضغط على زر التشغيل في الشوط الأمامي، ثم حرره في الشوط الخلفي لالتقاط المحلول/ الماء. وأتبع ذلك بشوط تجفيف إضافي بطيء بدون الضغط على زر التشغيل لإنهاء التجفيف.

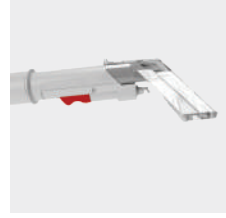


اضغط على زر التشغيل على الخرطوم لإطلاق المحلول/الماء.


استخدام وضع الشطف على الخرطوم

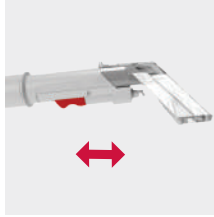

اضغط على زر التشغيل في الشوط الأمامي، ثم حرره في الشوط الخلفي لالتقاط الماء. أتبع ذلك بشوط تجفيف إضافي دون ضغط زر التشغيل لإنهاء التجفيف.

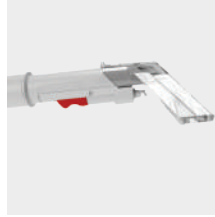

اضغط على زر التشغيل على الخرطوم لإطلاق الماء.

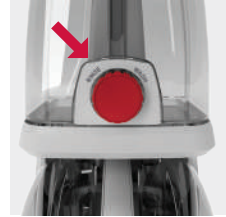

قم بتدوير قرص الغسيل/الشطف إلى وضع "الغسيل". يتم إطلاق الماء فقط لإزالة بقايا المحلول.

تنبيه: اختبار ثبات اللون - قم بتبليل قطعة قماش ماصة بياض بالمحلول. قم بفرك السجاد/الأغطية/المفروشات برفق في منطقة صغيرة مخفية بقطعة القماش المبللة. انتظر عشر دقائق وتحقق من إزالة أو بهتان اللون بمنشفة ورقية أو قطعة قماش بياض. إن كانت سجادتك تحتوي على أكثر من لون، فقم بفحص كل الألوان.

معلومة مهمة: يجب وضع غسالة السجاد في الوضع الرأسي عند استخدام الخرطوم والأدوات؛ مع إيقاف تشغيل فرش SpinsCrub وقضيب الفرش. لا تضع الغسالة في أعلى السلالم لتجنب وقوعها من على السلالم. ضع الغسالة في أسفل السلالم وقرم بتشغيلها.

استخدام الخرطوم والأداة




افتح غطاء موصل الخرطوم.



قرم تدوير قرص الغسيل/الشطف إلى وضع الغسيل.



املأ خزان الماء التنظيف بالماء الدافئ (بحد أقصى 40 درجة مئوية).

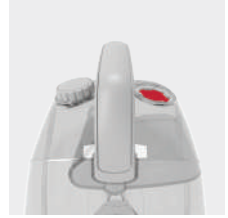


قرم بصب محلول هوفر لتنظيف السجاد في جانب المحلول بالخزان.



قرم بثبيت الأداة.



اسحب لفتح غطاء موصل أنبوب المحلول وادفع أنبوب المحلول بإحكام على المنفذ.

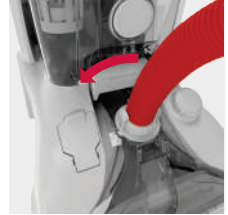

قرم بمحاذاة السهم الموجود على الخرطوم مع السهم الموجود على الغسالة واضغط الخرطوم في مكانه. قرم بتدوير الخرطوم في اتجاه عقارب الساعة لتثبيته في مكانه.

ملاحظة: قرم باستخدام غسالة السجاد أو الخرطوم لالتقاط الانسكابات قبل غسل وتنظيف المنطقة.



قرم بتوصيل مصدر التيار الرئيسي واضغط على دواسة التشغيل/الإيقاف لبدء التشغيل.



أدخل الأداة فوق اللسان في نهاية الخرطوم حتى تستقر في مكانها.



للحصول على أفضل نتائج، استخدم الماء/المحلول في الشوط الأمامي، ثم حرر زر التشغيل لالتقاط الماء/المحلول في الشوط الخلفي. أتبع ذلك بشوط تجفيف إضافي دون ضغط زر التشغيل لإنهاء التجفيف.



اضغط على زر التشغيل لإطلاق مزيج المحلول الماء.



اضغط على دواسة الإمالة واسحب المقبض للخلف.




قم بتوصيل مصدر التيار الرئيسي واضغط على دواسة التشغيل/الإيقاف لبدء التشغيل.

استخدام وضع الشطف

ملاحظة: للحصول على أفضل نتائج التنظيف، قم باستخدام الأشواط المتوازية المستقيمة البطيئة، ستزيد الأشواط الأمامية الجافة المتقطعة من التقاط الماء.



للحصول على أفضل نتائج، استخدم الماء في الشوط الأمامي، ثم حرر زر التشغيل لالتقاط الماء في الشوط الخلفي. أتبع ذلك بشوط تجفيف إضافي ببطء دون ضغط زر التحرير لإنهاء التجفيف.

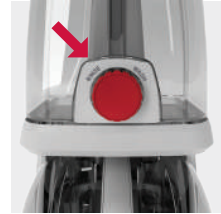

قم بتدوير قرص الغسيل/الشطف إلى وضع "الغسيل". يتم إطلاق الماء فقط لإزالة بقايا المحلول.

تنبيه: قمر دائمًا بفصل غسالة السجاد قبل إجراء أي فحوصات الصيانة / استكشاف الأخطاء وإصلاحها. قمر دائمًا بفصل غسالة السجاد قبل إجراء أي فحوصات الصيانة / استكشاف الأخطاء وإصلاحها. احرص دومًا على تفريغ وشطف خزانات الماء النظيف والممتسخ وانركها لتجف في الهواء قبل إعادة تركيبها.

معلومة مهمة: خزان الماء الممتسخ مزود بعوامة. عندما يكون خزان الماء الممتسخ ممتلئًا، أو إذا لم يكن رأس الأرضية ملامسًا للسجادة، ستؤدي العوامة إلى إيقاف الشفط على غسالة السجاد. عندئذٍ ستتمكن من سماع ما إذا كان هذا قد حدث لأن ضجيج المحرك بالآلة سوف يزداد. بمجرد تشغيل العوامة، قمر بإفراغ خزان الماء الممتسخ إذا كان ممتلئًا، إذا لم يكن خزان الماء الممتسخ ممتلئًا، قمر بإيقاف تشغيل الآلة عند مفتاح الطاقة، وانتظر حتى تستقر العوامة.

استخدام غسالة السجاد وأوضاع التنظيف

ملاحظة: يجب تجفيف السجاد بالهواء الجاف تمامًا قبل الغسيل. للحصول على أفضل النتائج الشاملة، استخدم الغسالة في وضع التنظيف العميق. وللמناطق الممتسخة بشدة، قد يكون من الضروري تكرار عملية التنظيف. قمر بعمل أشواط متقاطعة حسب النمط الأصلي مع عمل داخل لكل دورة.

وضع التنظيف السريع: أفضل وضع لتنظيف سطحي سريع لأن السجاد يجف في حوالي 45 دقيقة.

وضع التنظيف العميق: للحصول على أفضل نتائج شاملة لتنظيف عميق ودقيق.



قمر بتدوير غطاء خزان الماء عكس اتجاه عقارب الساعة كي يتم خلعه.



اسكب محلول هوفر لتنظيف السجاد في الخزان. أعد تركيب الغطاء.



قمر بتدوير غطاء خزان المحلول عكس اتجاه عقارب الساعة كي يتم خلعه.



اضغط على زر تحرير خزان الماء النظيف/المحلول، وقمر بسحبه ورفع فلك الخزان.



قمر بتدوير قرص الغسيل/الشفط إلى وضع "الغسيل". تقوم فرش SpinScrub بتنظيف عميق للسجاد باستخدام الماء والمنظفات لإزالة الأوساخ والبقع.



اختر وضع التنظيف عن طريق تدوير القرص على القاعدة. **وضع التنظيف السريع:** أفضل وضع لتنظيف سطحي سريع لأن السجاد يجف في حوالي 45 دقيقة.

وضع التنظيف العميق: للحصول على أفضل نتائج شاملة لتنظيف عميق ودقيق.



قمر بإمالة خزان الماء النظيف/المحلول مع محاذاته على غسالة السجاد. ادفع الخزان للخلف حتى يثبت في مكانه.



املا خزان الماء النظيف بالماء الدافئ (بحد أقصى 40 درجة مئوية). أعد تركيب الغطاء. قبل إعادة تركيب الخزان.

الرجاء قراءة قسم "معلومات السلامة العامة" قبل البدء في استخدام هذا الجهاز

معلومة مهمة: يجب تجفيف السجاد بالهواء الجاف تمامًا قبل الغسيل.

اختبار نبات اللون - قم بتبليل قطعة قماش ماصة بيضاء بالمحلول. قم بفرك السجاد/الأغطية/المفروشات برفق في منطقة صغيرة مخفية بقطعة القماش المبللة. انتظر عشر دقائق وتحقق من إزالة أو بهتان اللون بمنشفة ورقية أو قطعة قماش بيضاء. إن كانت سجادتك تحتوي على أكثر من لون، فقم بفحص كل الألوان.

اختبر السجاد/الأغطية/المفروشات - قم بتشغيل غسالة السجاد على منطقة صغيرة مخفية. إذا لم يحدث تراكم أوساخ بسبب تهالك استمر في التنظيف.

عند تنظيف غرفة كاملة، انقل الأثاث إلى خارج المنطقة لتنظيفها. وفي حال عدم إمكانية تحريك الأثاث، ضع ورقة الألومنيوم أو ورقة شمع تحت الأرجل. ذلك سيمنع التشطيبات الخشبية من تلطيخ سجادتك. قم بتغليف مفارش الأثاث والسناثر.

عند استخدام غسالة السجاد، يجب مراعاة احتياطات السلامة الأساسية دائمًا وعدم نقع السجاد الخاص بك. قم باستخدام محلول هوفر للسجاد فقط. قد يؤدي استخدام محاليل أخرى إلى زيادة نسبة الرغوة. وسيؤدي ذلك إلى إبطال الضمان. املا خزان الماء التنظيف بالماء الدافئ (بحد أقصى 40 درجة مئوية) فقط. سيؤدي ملء خزان الماء التنظيف بالماء الساخن/المغلي إلى إتلاف الجهاز وإبطال الضمان. هذه غسالة سجاد قوية، لذا قبل توصيلها تأكد من إيقاف تشغيل جميع أدوات التحكم. أمسك غسالة السجاد بإحكام عند بدء تشغيلها وأثناء الاستخدام.

تجميع غسالة السجاد



قم بلف كابل الطاقة حول خطاف الأسلاك لتخزينه.



قم بإمالة خزان الماء التنظيف/المحلول مع محاذاته على غسالة السجاد. ادفع الخزان للخلف حتى يثبت في مكانه.



أدخل البرغين وأحكم ربطهما باستخدام مفك براغي برأس متصالب (مفك صليبية).



قم بمحاذاة المقبض وأدخله في الجسم الرئيسي.

- 1 يتم تصنيع غسالة السجاد هذه للاستخدام المنزلي فقط وليس للاستخدام التجاري أو الصناعي.
- 2 لا تستخدم غسالة السجاد هذه إلا في أماكن داخلية وحافظ على الإضاءة الجيدة في المنطقة التي تقوم بتنظيفها وكسها.
- 3 أبعد أصابع اليد والشعر والملابس الفضفاضة بعيدًا عن الأجزاء المتحركة والفتحات أثناء استخدام غسالة السجاد هذه.
- 4 يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر 8 سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوجيههم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. ينبغي ألا يعيبت الأطفال بهذا الجهاز. ينبغي ألا يقوم الأطفال بالتنظيف أو بخطوات الصيانة التي يقوم بها المستخدم دون الإشراف عليهم.
- 5 قبل استخدام غسالة السجاد اختبر تراكم الأوساخ بسبب التهاك وثبات الألوان في السجاد/المفروشات/ الأغطية.
- 6 يجب ألا يتم استخدام سوى الأدوات والملحقات التي توصي هوفر بها مع غسالة السجاد هذه. قد يؤدي استخدام محاليل أخرى إلى عدم سريان الضمان.
- 7 لا ترك غسالة السجاد قيد التشغيل عندما لا يتم الإشراف عليها.
- 8 لا تستخدم غسالة السجاد في حالة سقوطها أرضًا أو تلفها أو تركها في أماكن خارجية.
- 9 لا تطأ سلك الطاقة بقدمك أو تستخدم غسالة السجاد في حالة تلف سلك أو قابس الشاحن. إذا تعرض سلك التيار الكهربائي للتلف، فيجب استبداله بواسطة شركة التصنيع أو وكيل الخدمة التابع له أو أشخاص مؤهلين بدرجة مشابهة لتجنب وقوع أي مخاطر.
- 10 لا تستخدم غسالة السجاد لإزالة أي مواد قابلة للاشتعال (سوائل خفيفة، بنزين، كبروسين إلخ.) أو لا تستخدم غسالة السجاد في منطقة محملة بالابخرة أو السوائل المتفجرة.
- 11 لا تمسك القابس أو تستخدم غسالة السجاد بيدين مبتلتين.
- 12 لا تستخدم غسالة السجاد في النقاط جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان القنب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمها في منطقة قد تكون بها سوائل ضارة (مثل الكلور وسائل التبييض ومقني الصرف من الألومينا).
- 13 لا تسحب غسالة السجاد أو تفلها باستخدام سلك الطاقة. لا تستخدم سلك الطاقة كمقبض ولا تسحب سلك الطاقة حول الزوايا أو الحواف الحادة أو تغلق بابًا فوق سلك الطاقة. لا تزح قابس غسالة السجاد عن طريق سحبه من سلك الطاقة.
- 14 لا تحمل غسالة السجاد عندما تكون قيد التشغيل.
- 15 لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف غسالة السجاد.
- 16 لا تستخدم غسالة السجاد مع فولتية غير صحيحة لأن ذلك قد يؤدي إلى إتلافها أو إصابة المستخدم. يتم توضيح قيمة الجهد الكهربائي المناسب في لوحة المعايير.
- 17 اكس سجاده دائمًا جيدًا قبل استخدام غسالة السجاد.
- 18 افحص مع الشركة المصنعة للأرضية وأجر اختبارًا دائمًا في منطقة فارغة قبل استخدام غسالة السجاد.
- 19 املا خزان الماء التنظيف بالماء الدافئ (بحد أقصى 40 درجة مئوية) فقط. سيؤدي ملء خزان الماء التنظيف بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان.
- 20 افضل غسالة السجاد دائمًا قبل إجراء أي عمليات صيانة وقبل توصيل أو فصل الخرطوم/ الملحقات.
- 21 أوقف كل مفاتيح التحكم في غسالة السجاد قبل فصل أو توصيل سلك الطاقة وقر دائمًا بعد الاستخدام بلف سلك الطاقة حول مشابك تثبيت السلك.
- 22 استبدل المصهر الموجود في القابس دائمًا بمصهر بريطاني أمبير. قر دائمًا بحماية كابل الطاقة من الأسطح الساخنة أو عند الاقتراب من أسنة اللهب المكشوفة.
- 23 توخ مزيدًا من الحذر عند التنظيف فوق السلالم.
- 24 أبعد دائمًا سلك الطاقة عن الفرش عند استخدام غسالة السجاد.
- 25 لا تستخدم سوى أسلاك إطالة معتمدة من CE بمعايرة 13 أمبير لأن أسلاك الإطالة غير المعتمدة قد تؤدي إلى زيادة سخونة. ينبغي توخي الحذر لوضع سلك الإطالة بحيث يتم تجنب خطر التعثر فيه.
- 26 استخدم دائمًا غسالة السجاد بعد تثبيت جميع خزانات الماء/المحلول والمرشحات في مكانها.
- 27 تأكد دائمًا من خلو الملحقات من الأضرار، والأوساخ، والملحقات قبل الاستخدام.
- 28 احتفظ بكل الفتحات خالية من الأوساخ لأن ذلك قد يؤثر في تدفق الهواء/الشفط.
- 29 استخدم دائمًا غسالة السجاد في وضع رأسي. لمنع تلف المحرك من المياه المتسخة، لا تقلب قلب غسالة السجاد رأسًا على عقب أو على جانبها أبدًا.
- 30 قر بتخزين غسالة السجاد في منطقة باردة وجافة. قبل تخزين غسالة السجاد، يرجى التأكد من أن جميع خزانات الماء/المحاليل، والمرشحات نظيفة وجافة تمامًا.

الرجاء الاحتفاظ بهذه التعليمات بحيث يتم استخدامها في المستقبل.



Power Scrub Elite

دليل المستخدم

CWGDH012
hoover-mea.com