



**ONE
PWR**
SYSTEM

CORDLESS

FLOORMATE JET

All-in-One Multi-Surface Hard Floor Cleaner

User Guide



CLHF-GLME

hoover-mea.com

2 IMPORTANT SAFETY INFORMATION

This machine is intended for household use only and NOT for commercial or industrial use.

PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.

- Don't leave the charger plugged in when unattended.
- Don't use the machine if it is faulty or has been dropped, damaged or left outdoors.
- Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
- Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't handle the charger, battery or use the machine with wet hands.
- Don't unplug the charger by pulling on the power cord.
- Don't use the charger if the charger cord or plug is damaged.
- Don't attempt to remove blockages with sharp objects as this may cause damage to the machine.
- Don't use the machine with the incorrect battery or charger as this may result in damage or injury to the user. The correct battery charger information is listed on the battery pack ratings label.
- Don't charge the battery outdoors, or leave the charger connected to the mains when not in use.
- Don't use the machine with a damaged battery. If the battery is damaged return the machine, battery and charger to the point of purchase.
- Don't carry the machine while it's switched on.
- Only Hoover ONEPWR batteries (BV15020ME/BV15030ME/BV15040ME) and charger (BV05100ME) should be used with this machine.
- Only Hoover ONEPWR recommended charger, batteries, tools and accessories should be used with this machine.
- Refer to the floor manufacturer's care recommendations before use. Test your flooring - run the machine over a small hidden area, if no damage or discolouration occurs continue cleaning. Not suitable for use on water sensitive flooring.
- Always remove the battery from the machine before carrying out any maintenance or if storing unused for a long period of time.
- Keep all openings clear and free from debris as this may affect the airflow/suction.
- Turn off all controls on the machine before disconnecting or connecting the battery.
- Always protect the charger power cord from heated surfaces or near open flames.

IMPORTANT SAFETY INFORMATION 3

- The machine can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the machine in a safe way and understand the hazards involved. Children shall not play with the machine. Cleaning and user maintenance shall not be made by children without supervision.
- Only use the machine indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Store the machine in a cool, dry area. Before storing ensure all water/solution tanks and filters are thoroughly clean and dry.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee. Always use the machine with all water/solution tanks and filters in place.
- Only Hoover recommended solution should be used with the machine. Using other solutions may invalidate the guarantee.
- Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side. Always stand the machine on a stable, level surface.
- Always check the brushroll is free from damage, dirt and debris before using.

BATTERY SAFETY PRECAUTIONS

- Replace the battery with a Hoover ONEPWR battery only. Use of another battery may present a risk of fire or explosion.
- Do not attempt to disassemble the battery, remove any component projecting from the battery terminals and do not dispose of in a fire.
The battery and charger have no user serviceable parts. Fire or injury may result.
- Prior to disposal, protect exposed terminals with heavy insulating tape to prevent shorting. The battery is to be disposed of safely at your local battery recycling centre.
- When the battery pack is not in use, keep it away from other metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- In case of battery leakages, avoid any contact with skin. Return the machine, battery and charger to the point of purchase.

4 GENERAL INFORMATION

Service and Help

If you have any queries or concerns about using your Hoover spot washer, visit hoover-mea.com

Consumables

To purchase spares and accessories, please visit hoover-mea.com

The use of genuine Hoover spare parts helps to maintain optimised performance and validates your guarantee.

Technical Specifications

Weight (without battery pack)	4.9kg
Water/solution tank capacity	0.64L
Dirty water tank capacity	0.29L

Run time and charge time dependent on battery pack used.

Subject to technical change without notice.

© 2020 Techtronic Floor Care Technology Ltd

Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.

Please contact your local authority for further details of your nearest designated collection point.



MACHINE OVERVIEW 5



- 1 Handle
- 2 Trigger
- 3 Power ON/OFF
- 4 Mode selector
- 5 Main unit
- 6 Dirty water tank release latch
- 7 Filter (hidden)
- 8 Separator
- 9 Dirty water tank
- 10 Brushroll cover release button
- 11 Brushroll cover
- 12 Brushroll
- 13 Battery dock
- 14 Battery cover
- 15 Water/Solution tank
- 16 Rinse/Storage tray
- 17 ONEPWR Battery
- 18 ONEPWR Charger
- 19 250ml Multi-floor Solution



Accessories



17



18



19

6 OPERATION


Charging the battery

IMPORTANT: THIS MACHINE IS ONLY TO BE USED WITH HOOVER ONEPWR BATTERIES AND CHARGER. PLEASE READ THE SAFETY GUIDE BEFORE USE.

Before first use, ensure the battery is fully charged. Failure to fully charge the battery before first use may result in poor battery performance. The life expectancy of the battery will vary depending on the usage of the machine.



Slide the battery down on to the charger.

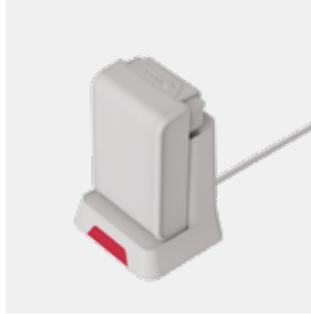

The charger light will flash white to show when the battery is charging. The light on the charger will stop flashing and go off when the battery is fully charged.



Once fully charged, slide the battery off the charger to remove.




To check the battery charge level press the battery symbol.

IMPORTANT:

- Test the machine over a small hidden area of your flooring before use. If no damage occurs continue cleaning.
- When using the machine, basic safety precautions should always be observed. Take care not to oversaturate flooring. Always finish on a dry stroke (no trigger pressed).
- For heavily soiled areas, it may be necessary to repeat the cleaning process.
- Only use Hoover ONEPWR Multi-floor solution. Using other solutions may cause excess foaming and will invalidate your guarantee.
- The water/solution tank should only be filled with warm water (max 40°C). Filling the water/solution tank with hot/boiling water will damage your washer and invalidate the guarantee.
- Empty and rinse out water/solution tank and dirty water tank and leave to air dry before storage. Do not leave solution stored in the tanks between uses.
- For prolonged storage the brushroll should be removed, cleaned and stored in the rinse/storage tray.


Assembly

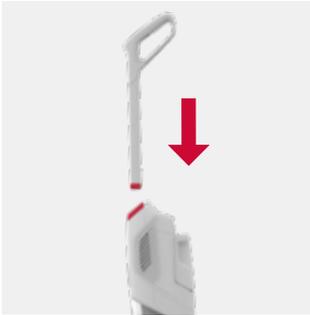

Push the handle into the main body until it clicks into place.



Pull to open the battery cover.

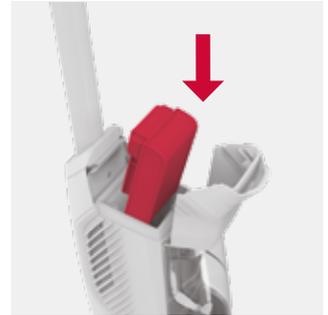

Holding the cover open, slide the battery into the machine until it clicks into place.



Close the battery cover.



To remove the battery press both the buttons to release.

8 OPERATION

Filling the water/solution tank

IMPORTANT: Do not leave solution stored in the tanks between uses.

When unpacking the machine, the water/solution tank cap will be attached to the side of the tank. Before first use, and after water/solution has been added, ensure that the cap is screwed onto the water/solution tank before refitting onto the machine.



Lift to remove the water/solution tank from the back of the machine.



Unscrew the cap and fill to the desired level using the markers on the tank.



Replace the cap and push the tank down on to the machine until it clicks into place.

Using the hard floor cleaner

IMPORTANT: Your dirty water tank is fitted with a float. When the dirty water tank is full, or the floorhead is not in contact with the floor, the float will shut off the suction on the machine. You will be able to hear if this has happened as the motor noise on the machine will increase. Once the float is activated, check if the dirty water tank is full and empty if necessary. If the dirty water water tank is not full, continue to check for blockages.



Place your foot on the base and pull the handle backwards to recline.



Press the on/off button to switch the machine on. The machine will always start in High Mode.



For an improved runtime, press the mode selector button to switch to Eco Mode.

For a more intense clean, press the mode selector button to switch to High Mode.



Press the trigger on the handle to release water and solution. Release the trigger to recover the water and solution.



For best results apply water/solution on the forward stroke and release the trigger on the backward stroke to pick up water/solution. For a dryer finish, follow with an additional dry stroke without the trigger pressed.

10 MAINTENANCE

CAUTION: Always switch off the machine and remove the battery before carrying out any maintenance or troubleshooting.

Emptying the dirty water tank

IMPORTANT: Empty and rinse out the water/solution tank and dirty water tank and leave to air dry before refitting.



Press down the dirty water tank release button and pull the tank to remove.



Hold the top of the dirty water tank lid and pull upwards to remove.



Twist the separator clockwise to release from the lid.



Empty the dirty water over a sink. Rinse the tank and separator under water (max 40°C) to remove dirt/debris.



To re-fit, line up the separator tab with the lid tab and twist anticlockwise to lock.



To re-fit, tilt the dirty water tank and line the front of the tank up onto machine. Push back until it clicks into place.

Cleaning the filter

IMPORTANT: After every use wash the filter with warm water (40°C max) and leave for 24 hours or until fully dry before refitting onto the machine. For best cleaning results filters should be replaced every 6 months (depending on the level of use). Ensure all filters are in place before using the machine.



Pull the tab on the bottom of the filter to remove.



Wash the filter under running water (40°C max). Leave for at least 24hrs or until fully dry before replacing.

Cleaning the separator



Hold the top of the dirty water tank lid and pull upwards to remove.



Twist the separator clockwise to release from the lid.



Wash the separator mesh under running water (40° max) to remove any dirt and debris.



To refit, line up the separator tab with the lid tab and twist anticlockwise to lock.

12 MAINTENANCE

Machine rinse and brushroll quick clean

IMPORTANT: We recommend rinsing the machine and quick cleaning the brushroll after every use.



Fill the tank up with warm water (40° max) and replace the cap.



Refit the tank into the machine.




Place the machine upright in the rinse/storage tray.



Switch the machine on.



Recline the machine so that the brushes rotate.

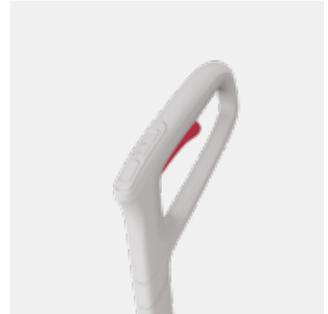

Press the trigger to release water onto the brushroll. Release the trigger at regular intervals to remove the brushroll dirt and debris. Repeat the process until the brushroll is clear and clean.

Removing and advanced cleaning of the brushroll

IMPORTANT: Make sure both the brushroll and brushroll cover are fitted correctly. If fitted incorrectly this may cause poor water pick up. For best cleaning results, advanced cleaning of the brushroll should be done every 5-6 uses. For prolonged storage, the brushroll should be removed, cleaned and stored in the rinse/storage tray.

CAUTION: If the brushroll has been obstructed, the brushroll motor protection sensor may have been activated. The brushroll will stop, the light on the handle will flash white and the machine may switch off. To reset, remove the brushroll and clear any obstruction. Wait 1 minute before refitting the brushroll, switch the machine on and recline.



Press the brushroll cover button and pull to open the cover.



Unhook the brushroll cover and remove.



To remove the brushroll, pull the tab on the end and remove from the brushroll housing.



Rinse the brushroll in water (40° max) and allow to dry before refitting.



The brushroll can be dried and stored in the rinse/storage tray.



Clean the brushroll housing and brushroll cover of any dirt and debris.

14 MAINTENANCE

Refitting the brushroll



To refit the brushroll, slide the right side into the machine and then push the left side in until it clicks.

Hook the brushroll cover onto the tabs on the base and close until it clicks into place.

Checking for blockages



Check for blockages and use a blunt object to remove the blockage.

Is there an accessory missing?

Check the contents on the back of the box.

Why does the machine have no power?

- The battery is not fitted correctly. See 'Assembly'.
- The battery has no charge. See 'Charging the battery'.
- The motor thermostat may have tripped. Empty the dirty water tank and check for blockages. Clean the filter and allow the machine to cool for approximately 1 hour. If you have washed the filter and separator, wait 24 hours to fully dry before placing back on the machine. See 'Cleaning the filter and separator'.
- The brushroll motor sensor has been activated. To reset, remove the brushroll and clear any obstruction. Wait 1 minute before refitting the brushroll. Switch the machine on and recline. See 'Removing and advanced cleaning of the brushroll'.

Why won't the machine pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before re-starting the machine. See 'Emptying the dirty water tank'.
- The brushroll cover may not be correctly fitted. See 'Removing and advanced cleaning of the brushroll'.
- The dirty water tank may not be assembled correctly or the lid may not be pushed down securely. See 'Emptying the dirty water tank'.
- Check for blockages and clear. See 'Checking for blockages' and 'Machine rinse and brushroll quick clean'.
- Check the filter located on the dirty water tank lid for dirt and debris. The filter should be washed after every use and replaced every 6 months. See 'Cleaning the filter'.
- Check the separator for dirt and debris and clean if necessary. See 'Cleaning the separator'.

Why won't the water/solution dispense?

- Squeeze the trigger on the handle to release water and solution.
- Make sure the water/solution tank is fitted securely. See 'Filling the water/solution tank'.
- The water/solution tank valve may be stuck. Hold the water/solution tank over the sink and press the valve underneath to release.
- The water/solution tank is empty. Refill the tank. See 'Filling the water/solution tank'.

Why won't the brushroll turn?

- The machine is not reclined. Place your foot on the base and pull the handle backwards to recline. See 'Operation'.
- The brushroll may be obstructed or may not be correctly fitted. See 'Removing and advanced cleaning of the brushroll'.

Why is there a flashing white light on the handle?

- The brushroll motor sensor has been activated. To reset remove the brushroll and clear any obstruction. Wait 1 minute before refitting the brushroll. Switch the machine on and recline. See 'Operation' and 'Removing and advanced cleaning of the brushroll'.

16 NOTES

هل هناك قطعة ملحقة مفقودة؟

تفقد المحتويات الموجودة على الجزء الخلفي من الصندوق.

ما سبب عدم وصول التيار الكهربائي إلى الجهاز؟

- عدم تركيب البطارية بشكل صحيح. راجع القسم "التجميع".
- البطارية فارغة من الشحن. راجع القسم "شحن البطارية".
- ربما يكون قد تم إعتاق ثرموستات الموتور. أفرغ خزان الماء المتسخ وتفقّد وجود الانسدادات. قم بتنظيف الفلتر وارك الجهاز ببرد لمدة ساعة تقريبًا. إذا كنت قد غسلت الفلتر والفاصل، فانظر لمدة 24 ساعة حتى يجفًا تمامًا قبل إعادة تركيبهما في الجهاز. راجع القسم "تنظيف الفلتر والفاصل".
- تم تنشيط مستشعر موتور الفرشاة الأسطوانية. لإعادة الضبط، انزع الفرشاة الأسطوانية وتخلص من أي إعاقات.
- انتظر لمدة دقيقة واحدة قبل إعادة تركيب الفرشاة الأسطوانية. قم بتشغيل الجهاز وإمالتة. راجع القسم "إزالة الفرشاة الأسطوانية وتنظيفها بشكل متطور".

لماذا لا يلتقط الجهاز الأوساخ؟

- قد يكون الجسم العائم في خزان الماء المتسخ في حالة نشطة. أفرغ خزان الماء المتسخ وانتظر حتى يستقر الجسم العائم قبل إعادة تشغيل الجهاز. راجع "تفريغ خزان الماء المتسخ".
- ربما لم يتم تركيب غطاء الفرشاة الأسطوانية بشكل صحيح. راجع القسم "إزالة الفرشاة الأسطوانية وتنظيفها بشكل متطور".
- ربما لم يتم تركيب خزان الماء المتسخ بشكل صحيح أو لم يتم تثبيت الغطاء بشكل محكم.
- راجع "تفريغ خزان الماء المتسخ".
- تفقّد أي انسدادات وقم بإزالتها إن وُجدت. راجع "تفقّد الانسدادات" و"غسل الجهاز والتنظيف السريع للفرشاة الأسطوانية".
- افحص الفلتر الموجود على خزان الماء المتسخ للتأكد من خلوه من الأوساخ والبقايا. يجب غسل الفلتر بعد كل استخدام واستبداله كل 6 أشهر. راجع "تنظيف الفلتر".
- افحص الفاصل للتأكد من خلوه من الأوساخ والبقايا وقم بتنظيفه عند اللزوم. راجع "تنظيف الفاصل".

ما سبب عدم إخراج الماء/المحلول؟

- اضغط على الزر الموجود على المقبض لإخراج الماء والمحلول.
- تأكد من تركيب خزان الماء/المحلول بشكل محكم. راجع "ملء خزان الماء/المحلول".
- قد يكون صمام خزان الماء/المحلول ملتصقًا. احمل خزان الماء/المحلول فوق الحوض واضغط على الصمام الموجود أسفلهُ لإخراج الماء.
- خزان الماء/المحلول فارغ. أعد ملء الخزان. راجع "ملء خزان الماء/المحلول".

ما سبب تعذر دوران الفرشاة الأسطوانية؟

- الجهاز ليس مائلًا. ضع قدمك على القاعدة واسحب المقبض إلى الخلف كي تتم الإمالة. راجع "التشغيل".
- ربما تمت إعاقه الفرشاة الأسطوانية أو لم يتم تركيبها بشكل صحيح. راجع القسم "إزالة الفرشاة الأسطوانية وتنظيفها بشكل متطور".

لماذا يوجد مصباح أبيض وامض على المقبض؟

- تم تنشيط مستشعر موتور الفرشاة الأسطوانية. لإعادة الضبط، انزع الفرشاة الأسطوانية وتخلص من أي إعاقات. انتظر لمدة دقيقة واحدة قبل إعادة تركيب الفرشاة الأسطوانية. قم بتشغيل الجهاز وإمالتة. راجع القسم "التشغيل" و"إزالة الفرشاة الأسطوانية وتنظيفها بشكل متطور".



اشبك غطاء الفرشاة الأسطوانية باللسانين الموجودين على القاعدة وأغلقه حتى يستقر في مكانه بإحكام.

لإعادة تركيب الفرشاة الأسطوانية، حرك الجانب الأيمن لإدخاله في الجهاز ثم اضغط على الجانب الأيسر حتى يستقر في مكانه بإحكام.

تفقد الانسدادات



تفقد الانسدادات واستخدم جسمًا غير حاد لإزالتها إن وجدت.

13 الصيانة

إزالة الفرشاة الأسطوانية وتنظيفها بشكل متطور

معلومة مهمة: تأكد من تركيب الفرشاة الأسطوانية وغطاء الفرشاة الأسطوانية بشكل صحيح. فإذا لم يتم تركيبهما على نحو صحيح، فسيؤدي ذلك إلى ضعف امتصاص الماء. للحصول على أفضل نتائج التنظيف، يجب إجراء التنظيف المتقدم للفرشاة الأسطوانية بعد كل 5-6 مرات من الاستخدام. عند تخزين الجهاز لفترة طويلة يجب نزع الفرشاة الأسطوانية وتنظيفها وتخزينها في درج الغسيل/التخزين.

تنبيه: إذا تمت إعاقة الفرشاة الأسطوانية، فرما يكون قد تم تنشيط مستشعر حماية الموتور الخاص بها. ستوقف الفرشاة الأسطوانية ويومض المصباح الموجود على المقبض بلون أبيض وقد يتوقف تشغيل الجهاز. لإعادة الضبط، انزع الفرشاة الأسطوانية وتخلص من أي إعاقات. انتظر دقيقة واحدة قبل إعادة تركيب الفرشاة الأسطوانية، ثم قم بتشغيل الجهاز وإمالتة.



إزالة الفرشاة الأسطوانية، اسحب اللسان الموجود في نهايتها وانزعها من مثبت الفرشاة الأسطوانية.



افصل خطاف غطاء الفرشاة الأسطوانية وقم بإزالتها.



اضغط على زر غطاء الفرشاة و اسحب لفتح الغطاء.



نظف مكان لفة الفرشاة و غطاء الفرشاة من أي أوساخ أو حطام.



يمكن تجفيف فرشاة الأسطوانة وتخزينها في درج الغسيل/التخزين.



اغسل الفرشاة الأسطوانية في الماء (40 درجة سيلزيوس بحد أقصى) واتركها تجف قبل إعادة تركيبها.

معلومة مهمة: نوصي بغسل الجهاز والتنظيف السريع للفرشاة الأسطوانية عقب كل استخدام.



ضع الجهاز في وضع قائم في درج الغسيل/التخزين.



أعد تركيب الخزان في الجهاز.



املأ الخزان بالماء الدافئ (40 درجة سيليزيوس بحد أقصى) وأعد تركيب الغطاء.



اضغط على الزر لإخراج الماء إلى الفرشاة الأسطوانية. حرر الزر على فترات منتظمة لإزالة الأوساخ والبقايا من الفرشاة الأسطوانية. كرر العملية حتى تصبح الفرشاة الأسطوانية نظيفة ونظيفة.



قم بإمالة الجهاز بحيث تدور الفرشاة.



قم بتشغيل الجهاز.

معلومة مهمة: بعد كل استخدام، اغسل الفلتر بالماء الدافئ (بحد أقصى 40 درجة سيلزيوس) واتركه لمدة 24 ساعة أو حتى يجف تمامًا قبل إعادة تركيبه في الجهاز. للحصول على أفضل نتائج للتنظيف، يجب استبدال الفلتر كل 6 أشهر (حسب مستوى الاستخدام). تأكد من وجود جميع الفلاتر في أماكنها قبل استخدام الجهاز.



اغسل الفلتر تحت الماء الجاري (بحد أقصى 40 درجة مئوية).
انتظر 24 ساعة على الأقل أو حتى يجف تمامًا قبل إعادة تركيبه.



اسحب اللسان الموجود أسفل الفلتر لإخراجه.



أدر الفاصل في اتجاه عقارب الساعة لتحريره من الغطاء.



أمسك بالجزء العلوي من غطاء خزان الماء المتسخ واسحبه للأعلى لإزالته.



إعادة التركيب، قم بمحاذاة لسان الفاصل مع لسان الغطاء وأدره في عكس اتجاه عقارب الساعة لثقله.



اغسل شبكة الفاصل تحت الماء الجاري (40 درجة سيلزيوس بحد أقصى) لإزالة أي أوساخ وبقايا.

تنبيه: يجب دومًا إيقاف تشغيل الجهاز وإخراج البطارية قبل إجراء أي أعمال صيانة أو استكشاف الأعطال وإصلاحها.

تفريغ خزان الماء المتسخ

معلومة مهمة: قم بإفراغ وشطف خزان الماء/المحلول وخزان الماء المتسخ وتركهما يجفان في الهواء قبل إعادة تركيبهما.



أمسك بالجزء العلوي من غطاء خزان الماء المتسخ واسحبه للأعلى لإزالته.



اضغط على زر تحرير خزان الماء المتسخ واسحب الخزان لإخراجه.



لإعادة التركيب، قم بمحاذاة لسان الفاصل مع لسان الغطاء وأدره في عكس اتجاه عقارب الساعة لقفله.



أفرغ الماء المتسخ في الحوض. اغسل الخزان والفاصل تحت الماء الجاري (في درجة حرارة تبلغ بحد أقصى 40 درجة سيلزيوس) لإزالة الأوساخ/البقايا.



أدر الفاصل في اتجاه عقارب الساعة لتحريره من الغطاء.



ولإعادة التركيب، قم بإمالة خزان الماء المتسخ ومحاذاة الجزء الأمامي للخزان مع الجهاز، اضغط عليه للخلف حتى يستقر في مكانه بإحكام.

9 التشغيل

استخدام منظف الأرضيات الصلبة

معلومة مهمة: خزان الماء المتسخ مجهز بجسم عائم، فعندما يمتلئ الخزان عن آخره، أو لا يكون رأس الأرضية ملامساً للأرضية، يغلق هذا الجسم العائم وظيفة الشفط للجهاز، وسيكون بوسعك سماع صوت حال حدوث ذلك عندما ترتفع الضوضاء الصادرة عن محرك الجهاز. بمجرد تنشيط الجسم العائم، تحقق مما إذا كان خزان الماء المتسخ ممتلئاً وأفقره عند اللزوم. وإذا لم يكن خزان الماء المتسخ ممتلئاً، فواصل إجراء الفحص للتحقق من خلو أجزاء الجهاز من أي انسدادات.



لتحسين أوقات التشغيل، اضغط على زر محدد الوضع للتحويل إلى الوضع الاقتصادي.

لتنظيف المُكثف، اضغط على زر محدد الوضع للتحويل إلى الوضع المرتفع.



اضغط على زر التشغيل/الإيقاف لتشغيل الجهاز. يبدأ تشغيل الجهاز دومًا في الوضع المرتفع.



ضع قدمك على القاعدة واسحب المقبض إلى الخلف كي تتم الإمالة.



للحصول على أفضل النتائج استخدام الماء/المحلول مع الحركة الأمامية وحرر الزر أثناء الحركة الخلفية لالتقاط الماء/المحلول. للحصول على نتائج أكثر جفافاً، تابع بشوط جاف إضافي مع عدم الضغط على أي زر.



اضغط على الزر الموجود على المقبض لإخراج المحلول والماء. حرر الزر لاستعادة الماء والمحلول.

معلومة مهمة: لا تترك المحلول بداخل الخزانات بين مرات استعمال الجهاز.

عند فك تغليف الجهاز، يتم إلحاق غطاء خزان الماء/المحلول بالجزء الجانبي للخزان. قبل الاستخدام للمرة الأولى، وبعد إضافة الماء/المحلول، تأكد من تثبيت الغطاء على خزان الماء/المحلول قبل إعادة تركيبه على الجهاز.



أعد وضع الغطاء واضغط على الخزان لأسفل على الجهاز حتى يستقر في مكانه.



فك الغطاء وأملأه حتى تصل إلى المستوى المرغوب باستخدام العلامات الموجودة على الخزان.




ارفع خزان الماء/المحلول لإزالته من الجزء الخلفي للماكينة.

7 التشغيل

معلومة مهمة:

- اختبر الجهاز على منطقة صغيرة غير ملحوظة من الأرضية قبل استخدامها. وإذا لم يحدث أي تلف، فواصل التنظيف.
- ينبغي دائمًا مراعاة احتياطات الأمان الأساسية عند استخدام الجهاز. توخَّ بالبحر حتى لا تغمر الأرضية. أنه التنظيف دومًا بشروط جاف (عدم الضغط على أي زر).
- بالنسبة للأجزاء شديدة الاتساخ، قد يتطلب الأمر تكرار عملية التنظيف.
- استخدم فقط محلول ONEPWR من هوفر لتنظيف الأرضيات المتعددة. فقد يؤدي استخدام المحاليل الأخرى إلى تكوين رغوة زائدة وإبطال الضمان.
- يجب ملء خزان الماء/المحلول فقط بماء دافئ (بحد أقصى 40 درجة سيلزيوس). حيث يؤدي ملء الخزان بالماء الساخن/المغلي إلى إتلاف الجهاز وإبطال الضمان.
- قم بإفراغ وشطف خزان الماء/المحلول وخزان الماء المتسخ واتركهما يجفان في الهواء قبل التخزين.
- لا تترك المحلول بداخل الخزانات بين مرات استعمال الجهاز.
- عند تخزين الجهاز لفترة طويلة يجب نزع الفرشاة الأسطوانية وتنظيفها وتخزينها في درج الغسيل/التخزين.


التجميع

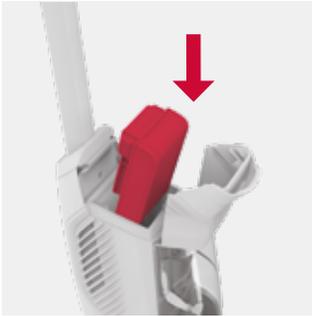

مع الاحتفاظ بالغطاء مفتوحًا، حرك البطارية إلى داخل الجهاز حتى تستقر في مكانها.



اسحب لفتح غطاء البطارية.

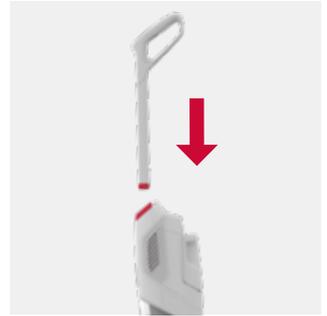

ادفع المقبض في الجسم الرئيسي حتى تسمع صوت طقطة يدل على استقراره في مكانها.



لازالة البطارية اضغط على حد سواء على أزرار الفتح.



أغلق غطاء البطارية.

معلومة مهمة: يجب استخدام هذا الجهاز فقط مع بطاريات وشاحن ONEPWR من هوفر. الرجاء قراءة دليل السلامة قبل الاستخدام.

قبل الاستخدام لأول مرة، تأكد من شحن البطارية بالكامل. قد يؤدي عدم شحن البطارية تمامًا قبل الاستخدام للمرة الأولى إلى ضعف أداء البطارية، ويتباين العمر الافتراضي للبطارية حسب استعمال الجهاز.




وبمجرد أن يتم شحنها بالكامل، حرك البطارية إلى خارج الشاحن لإخراجها.

لفحص مستوى شحن البطارية اضغط على رمز



البطارية.

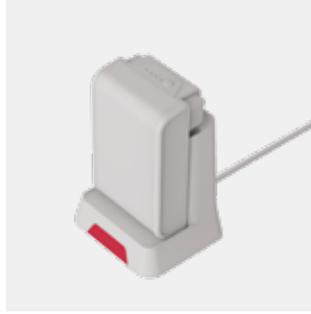

سيومض مصباح الشاحن بلون أبيض لإظهار أن البطارية قيد الشحن. ويتوقف المصباح الموجود على الشاحن عن الوميض وينطفئ عندما يتم شحن البطارية بالكامل.



حرك البطارية للأسفل فوق الشاحن.

5 نظرة عامة على الجهاز



- 1 المقبض
- 2 زر
- 3 زر التشغيل/إيقاف التشغيل
- 4 محدد الوضع
- 5 الوحدة الرئيسية
- 6 قفل تحرير خزان الماء المتسخ
- 7 الفلتر (مخفي)
- 8 الفاصل
- 9 خزان الماء المتسخ
- 10 زر تحرير غطاء الفرشاة الأسطوانية
- 11 غطاء الفرشاة الأسطوانية
- 12 الفرشاة الأسطوانية
- 13 مساحة البطارية
- 14 غطاء البطارية
- 15 خزان الماء/المحلول
- 16 درج الغسيل/التخزين
- 17 بطارية ONEPWR
- 18 شاحن ONEPWR
- 19 محلول تنظيف الأرضيات المتعددة 250 مل



الخدمة والمساعدة

إذا كانت لديك أي استفسارات أو مخاوف بشأن استخدام جهاز تنظيف البقع من هوفر، تفضل بزيارة الموقع hoover-mea.com

المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: hoover-mea.com. إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

المواصفات الفنية

الوزن (بدون حزمة البطارية)	4.9 كجم
سعة خزان الماء/المحلول	0.64 لتر
سعة خزان الماء المتسخ	0.29 لتر

يتوقف وقت التشغيل ووقت الشحن على حزمة البطارية المستخدمة.
خاضع للتغيير الفني بدون إشعار.

© 2020 Techtronic Floor Care Technology Ltd

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية.
الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك اصطحب هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبولها دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ومنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات.

الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



3 معلومات السلامة المهمة

- يمكن استخدام هذا الجهاز بواسطة الأطفال الذين يبلغون من العمر 8 سنوات أو أكبر وكذلك بواسطة الأشخاص الذين يعانون من قصور جسدي أو حسي أو عقلي أو نقص الخبرة والمعرفة بشرط خضوعهم للإشراف وتوعيتهم بالإرشادات الخاصة باستخدام الجهاز بطريقة آمنة وأن يتفهموا المخاطر الكامنة. ينبغي ألا يعبث الأطفال بهذا الجهاز. ينبغي ألا يقوم الأطفال بالتنظيف أو بخطوات الصيانة التي يقوم بها المستخدم دون الإشراف عليهم.
- لا تستخدم هذا الجهاز إلا في أماكن داخلية وحافظ على الإضاءة الجيدة في المنطقة التي تقوم بتنظيفها.
- أبعاد أصابع اليد والشعر والملابس الفضفاضة بعيداً عن الأجزاء المتحركة والفوهات أثناء استخدام الجهاز.
- قم بتخزين الجهاز في منطقة جافة وباردة. قبل تخزين الجهاز، يُرجى التأكد من أن جميع خزانات الماء/المحلول والفلاتر نظيفة وجافة تمامًا.
- لا تستخدم سوى أسلاك إطالة معتمدة من CE بمعايرة 13 أمبيرًا لأن أسلاك الإطالة غير المعتمدة قد تؤدي إلى زيادة السخونة. ينبغي توخي الحذر لوضع سلك الإطالة بحيث يتم تجنب خطر التعثر فيه.
- يجب ملء خزان الماء التنظيف بالماء الدافئ (بحد أقصى 40 درجة سيلزيوس) فقط. سيؤدي ملء الخزان بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان. استخدم الجهاز دومًا مع وجود جميع خزانات الماء/المحلول والفلاتر في أماكنها.
- ينبغي عدم استخدام سوى المحلول الذي توصي شركة هوفر (Hoover) به مع هذا الجهاز. حيث قد يؤدي استخدام محاليل أخرى إلى إبطال الضمان.
- استخدم الجهاز دومًا في وضع قائم. للحيلولة دون تلف المحرك بسبب الماء المتسخ، لا تقلب الجهاز أبدًا رأسًا على عقب أو على جانبه. وأوقف الجهاز دومًا على سطح مستقر ومستوٍ.
- افحص الفرشاة الأسطوانية دومًا للتأكد من خلوها من التلف والأوساخ والبقايا قبل استخدامها.

التدابير الوقائية لسلامة البطارية

- لا تستبدل البطارية إلا ببطارية هوفر ONEPWR. قد يؤدي استخدام بطارية أخرى إلى خطر نشوب حريق أو وقوع انفجار.
- لا تحاول تفكيك البطارية أو إزالة أي مكونات بارزة من أطراف التوصيل بها ولا تتخلص منها بإلقائها في النار.
- لا تشمل البطارية والشاحن على أجزاء يسمح للمستخدم بصيانتها. قد يؤدي ذلك إلى نشوب حريق أو وقوع إصابة.
- قبل التخلص من البطارية، احم أطراف التوصيل المكشوفة بشرط عازل ثقيل لمنع حدوث تقاصر كهربائي. ويجب التخلص من البطارية بأمان في مركز إعادة تدوير البطاريات المحلي بمنطقتك.
- في حالة عدم استخدام حزمة البطارية، احتفظ بها بعيدًا عن الأجسام المعدنية الأخرى التي قد تؤدي إلى حدوث اتصال من طرف توصيل لآخر.
- فقد يؤدي توصيل طرفي البطارية ببعضهما بعضًا إلى الإصابة بحروق أو نشوب حريق.
- في حالة حدوث تسربات بالبطارية، تجنب ملامستها للجلد. وأعد الجهاز والبطارية والشاحن إلى نقطة الشراء.

2 معلومات السلامة المهمة

يتم تصنيع هذا الجهاز للاستخدام المنزلي فقط وليس للاستخدام التجاري أو الصناعي.

الرجاء الاحتفاظ بالتعليمات من أجل استخدامها بعد ذلك ولا تستخدم هذا الجهاز إلا حسب التعليمات الواردة في هذا الدليل.

- لا تترك الجهاز متصلًا بالشاحن من دون إشراف.
- لا تستخدم الجهاز إذا كان معيبًا أو في حالة سقوطه أرضًا أو تلفه أو تركه في أماكن خارجية.
- لا تستخدم الجهاز لالتقاط أي مواد قابلة للاشتعال أو قابلة للاحتراق (سائل الولاغات، البنزين، الكيروسين، وما إلى ذلك) أو تستخدمه في مكان تنتشر به الأبخرة أو السوائل القابلة للانفجار.
- لا تستخدم الجهاز في التقاط أعقاب جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان النقااب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمه في منطقة قد تكون بها سوائل ضارة (مثل الكلور وسائل التبييض ومنقي الصرف من الأمونيا).
- لا تمسك الشاحن أو البطارية أو تستخدم الجهاز بيدين مبتلتين.
- لا تنزع الشاحن عن طريق سحبه من سلك التيار الكهربائي.
- لا تستخدم الشاحن إذا كان سلك أو قابس الشاحن تالفًا.
- لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف الجهاز.
- لا تستخدم الجهاز مع جهد أو شاحن غير مناسب لأن ذلك قد يؤدي إلى إتلافه أو إصابة المستخدم. معلومات البطارية والشاحن الصحيحة مدرجة على ملصق التصنيف الموجود على حزمة البطارية.
- لا تشحن البطارية في أماكن خارجية مفتوحة أو تترك الشاحن متصلًا بمصدر التيار الكهربائي عند عدم استخدام الجهاز.
- لا تستخدم الجهاز إذا كانت البطارية تالفة. وفي هذه الحالة أعد الجهاز والبطارية والشاحن إلى نقطة الشراء.
- لا تحمل الجهاز بينما يكون قيد التشغيل.
- يجب فقط استخدام بطاريات (BV15020ME/BV15030ME/BV15040ME) ONEPWR (BV05100ME) من هوفر مع هذا الجهاز.
- يجب ألا يتم استخدام سوى الشاحن والبطاريات والأدوات والملحقات الموصى بها من Hoover ONEPWR مع هذا الجهاز.
- ارجع إلى توصيات العناية بالأرضيات التي توفرها الجهة المصنعة قبل الاستخدام. اختبر الأرضيات - شغل الجهاز على منطقة صغيرة غير ملحوظة، وإذا لم يحدث أي تلف أو تغير للألوان فواصل التنظيف. الجهاز غير مناسب للاستخدام على الأرضيات الحساسة للماء.
- أخرج البطارية دومًا من الجهاز قبل إجراء أي أعمال صيانة أو في حالة تخزين الجهاز وعدم استخدامه لمدة طويلة.
- احتفظ بكل الفتحات خالية من الأوساخ لأن ذلك قد يؤثر في تدفق الهواء/الشفط.
- أوقف تشغيل كل مفاتيح التحكم في الجهاز قبل فصل البطارية أو توصيلها.
- قم دائمًا بحماية سلك التيار الكهربائي الخاص بالشاحن من الأسطح الساخنة أو عند الاقتراب من أسنة اللمب المكشوفة.



**ONE
PWR**
SYSTEM

CORDLESS

FLOORMATE JET

الجهاز متعدد الوظائف لتنظيف الأرضيات الصلبة متعددة الأسطح

دليل المستخدم



CLHF-GLME

hoover-mea.com