



# PLATINUM SMARTWASH

Automatic Carpet Cleaner

## User Guide



CDCW-SWME

hoover.ae

## 2 IMPORTANT SAFETY INFORMATION

**This machine is intended for household use only and NOT for commercial or industrial use.**

**PLEASE KEEP INSTRUCTIONS FOR FURTHER USE AND USE ONLY AS INSTRUCTED IN THIS GUIDE.**

- Don't leave the machine plugged in when unattended.
  - Don't use the machine if it has been dropped, damaged or left outdoors.
  - Don't run over the power cord or use the machine if the power cord or plug is damaged. If the power cord is damaged, it must be replaced by a qualified person in order to avoid a hazard.
  - Don't use the machine to pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use the machine in an area with explosive vapours or liquid.
  - Don't handle the plug or use the machine with wet hands.
  - Don't pull or carry the machine by the power cord.
  - Don't use the machine to pick up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
  - Don't use the power cord as a handle, pull the power cord around corners or sharp edges, or close a door over the power cord.
  - Don't unplug the machine by pulling on the power cord.
  - Don't carry the machine while it's switched on.
  - Don't attempt to remove blockages with sharp objects as this may cause damage to the machine. Remove blockages only as instructed in this guide.
  - Don't use the machine with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the ratings label.
  - Don't over saturate your flooring. Always finish on a dry stroke.
  - Check with the manufacturer of your flooring prior to using the machine.
  - The clean water tank should be filled with warm water (max 40°C) only. Filling the clean water tank with hot or boiling water will damage the machine and invalidate the guarantee.
  - Always vacuum your flooring thoroughly before using the machine.
  - Test all carpets/rugs/upholstery before full usage. Run the machine over a small hidden area. If no damage or pile distortion occurs continue cleaning.
  - Always unplug the machine before carrying out any maintenance and before connecting or disconnecting the hose/accessories.
  - Always check the machine, tools and accessories are free from damage, dirt/debris before using.
  - Take extra care when cleaning on the stairs.
  - Always protect the power cord from heated surfaces or near open flames.
- Turn off all controls on the machine before disconnecting or connecting the power cord. After use always wrap the power cord around the cord clips provided.

# IMPORTANT SAFETY INFORMATION

3

- Always keep the power cord away from the brushes whilst using the machine.
- Use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- Always use the machine with all water tanks and filters in place.
- Keep all openings clear and free from debris as this may affect the airflow/suction/water pick up.
- Always use the machine in an upright position. To prevent motor damage from dirty water, never hold the machine upside down or on its side.
- Store the machine in a cool, dry area. Before storing the machine please ensure all water/solutions tanks are empty and filters are thoroughly clean and dry.

## **BASIC SAFETY PRECAUTIONS**

- Only use the machine indoors and keep the area you're cleaning well lit.
- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the machine.
- Before using the machine test your carpets/rugs/upholstery for colourfastness and pile distortion.
- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the safe use of the appliance by a person legally responsible for their safety. They should be supervised whilst using the appliance. Children shall not use, clean or play with this appliance, which when not in use should be secured out of their reach.
- Only HOOVER recommended tools and solution should be used with this machine. Using other solutions may invalidate the guarantee.

# 4 GENERAL INFORMATION

## Service and Help

If you have any queries or concerns about using your HOOVER carpet washer, visit [hoover.ae](http://hoover.ae)

## Consumables

To purchase spares and accessories, please visit [hoover.ae](http://hoover.ae)

The use of genuine HOOVER spare parts helps to maintain optimised performance and validates your guarantee.

## Technical Specifications

### CDCW-SWME

Voltage	See rating label on machine for details.
Wattage	See rating label on machine for details.
Cord length	9m
Weight	8.6kg

Subject to technical change without notice.

© 2021 Techtronic Floor Care Technology Ltd

Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

This marking on the product(s) and/or accompanying documents means that used electrical and electronic equipment (WEEE) should not be mixed with general household waste. For proper treatment, recovery and recycling, please take this product(s) to designated collection points where it will be accepted free of charge. Disposing of this product correctly will help save valuable resources and prevent any potential negative effects on human health and the environment, which could otherwise arise from inappropriate waste handling.



Please contact your local authority for further details of your nearest designated collection point.



# MACHINE OVERVIEW 5

- 1 Handle
- 2 Clean water tank cap
- 3 Clean water tank
- 4 Dirty water tank handle
- 5 Dirty water tank
- 6 Hose connection port cover
- 7 Nozzle release clip
- 8 Nozzle
- 9 Brushbars
- 10 Dry only button (hidden)
- 11 Quick cord release hook (hidden)
- 12 Solution tank (hidden)
- 13 Carry handle (hidden)
- 14 Dirty water tank filter (hidden)
- 15 Quick cord release hook (hidden)
- 16 Handle release pedal (hidden)
- 17 On/Off pedal (hidden)
- 18 Wash/dry mode indicator
- 19 2.5m hose
- 20 x2 250ml Platinum Antibacterial Solution
- 21 SpinScrub hand tool
- 22 2-in-1 antimicrobial tool
- 23 Accessory Bag

## Accessories

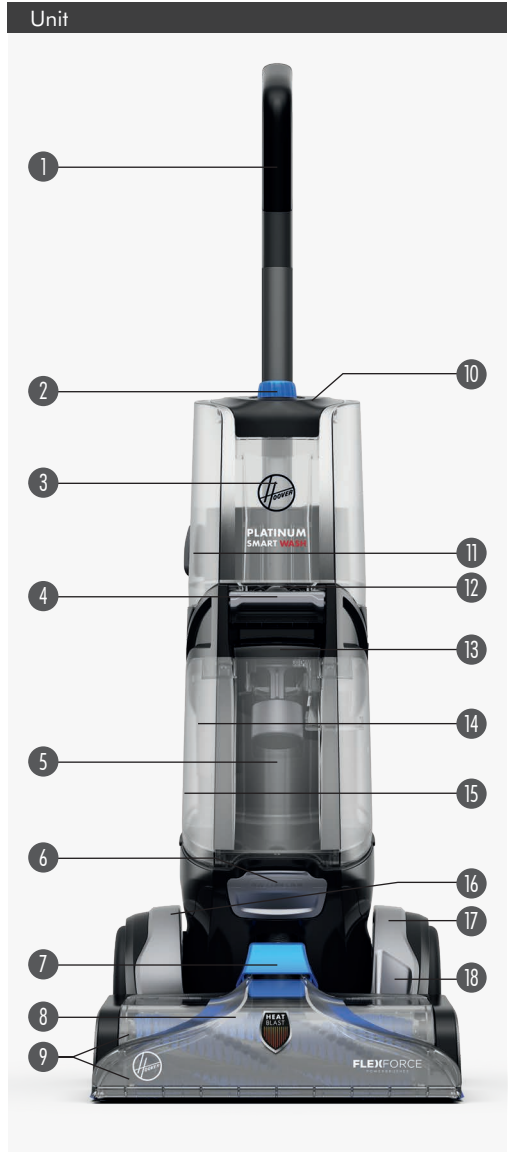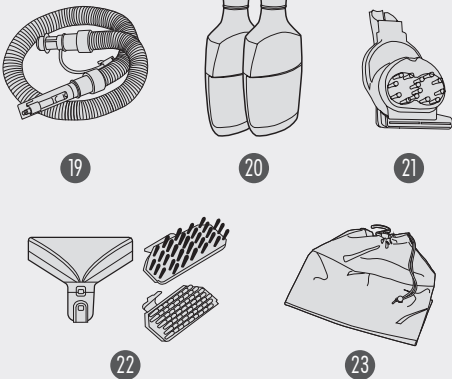

# 6 OPERATION

## PLEASE READ 'IMPORTANT SAFETY INFORMATION' AT THE BEGINNING BEFORE USE


**IMPORTANT:** Carpets should be dry vacuumed thoroughly before washing.

- Test for colourfastness - Wet a white absorbent cloth with the solution. In a small hidden area of your carpet/rugs/upholstery, gently rub with the dampened cloth. Wait ten minutes and check for colour removal or bleed with a white paper towel or cloth. Check all carpets/rugs/upholstery material before first use and if your carpet has more than one colour, check all colours.
- Test all flooring/carpets/rugs before first usage. Run the machine over a small hidden area. If no damage or pile distortion occurs continue cleaning.
- When using the machine, basic safety precautions should always be observed. Do not over saturate your carpets and continue using dry strokes until little water is visibly passing through the nozzle. When using the hose and tools always finish on a dry stroke.
- When cleaning an entire room, move furniture out of the area to be cleaned. If the furniture cannot be moved, place aluminium foil or wax paper under the legs. This will prevent wood finishes from staining your carpet. Pin up furniture skirts and curtains.
- Only use HOOVER carpet solution. Using other solutions may cause excess foaming and will invalidate the guarantee.
- For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass.
- The clean water tank should only be filled with warm water (max 40°C). Filling the clean water tank with hot/boiling water will damage your machine and invalidate the guarantee.
- Empty and rinse out clean and dirty water tanks and leave to air dry before storage. Do not leave solution stored in the tanks between uses.
- This is a powerful machine, before plugging in make sure all controls are turned off and hold the machine firmly when starting and during use.


## Assembly



Stand the base of the machine on the floor in the upright position.

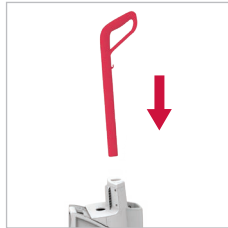

Push the handle into the main body until it clicks into place.

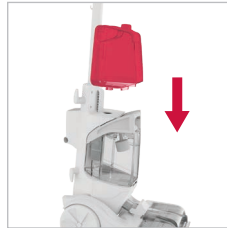

Align the clean water tank with the body of the machine. Slide it down and press firmly into place.

## Filling the solution tank

**IMPORTANT:** Screw the solution tank cap tightly when refitting. Do not leave the solution stored in the tanks between uses. Unused solution can be poured back into the bottle.



Pull up the solution tank and lift to remove.



Twist the solution tank cap anticlockwise and remove.



Fill the solution tank with the HOOVER carpet cleaning solution.



Twist the solution tank cap clockwise until tight.



To replace, slide and push the solution tank firmly into the machine.

## Filling the clean water tank



Slide up and lift to remove the clean water tank.



Twist the clean water tank cap anticlockwise and remove.



Fill the clean water tank with warm water (max 40°C).



To replace the clean water tank align the clean water tank with the body of the machine. Slide it down and press firmly into place.

# 8 OPERATION

## Using the machine

**CAUTION:** The brushbars constantly rotate when switched on and the machine is reclined. Never use on one spot for an extended period of time as the brushbars may damage the floor surface.

**IMPORTANT:** Carpets should be dry vacuumed thoroughly before washing. For heavily soiled areas, it may be necessary to repeat the cleaning process. Make criss-crossing strokes across the original pattern and overlap with each pass. Do not over saturate the carpet.



Plug the machine into the mains and press the On/Off pedal to switch on.



Press the handle release pedal and pull the handle backwards to recline the machine. The brushes will start rotating.



Slowly push the machine forwards. Water/solution will automatically dispense.




The mode indicator will illuminate **WASH** on the forward stroke.



Slowly pull the machine backwards to pick up the water/solution.



The mode indicator will illuminate **DRY** on the backward stroke.

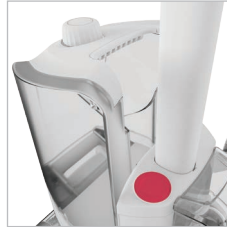

For a dryer finish, press the dry only button to stop the water delivery. Continue using dry strokes until little water is visibly passing through the nozzle.



## Rinsing the carpet

**IMPORTANT:** Optional step. To extract any remaining solution from your carpet, rinse your carpets with water only.



To rinse pull up the solution tank and lift to remove.



Slowly push the machine forwards. The brushes will start rotating and just water will automatically dispense.




The mode indicator will illuminate **WASH** on the forward stroke.



Slowly pull the machine backwards to pick up the water.



The mode indicator will illuminate **DRY** on the backward stroke.

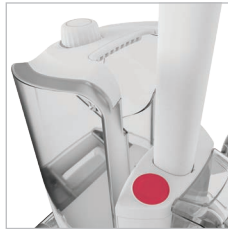

For a dryer finish, press the dry only button to stop the water delivery. Continue using dry strokes until little water is visibly passing through the nozzle.

# 10 OPERATION

## Using the hose and tools

**IMPORTANT:** The machine should be in the upright position when using the hose and tools; this will deactivate the brushes. To avoid saturating the carpet, do not use more than 4 wet strokes over any one area. Always end with dry strokes (trigger released).



### SpinScrub Hand Tool

Suitable for targeting stains and stubborn marks on rugs and carpet.



### 2-in-1 Antimicrobial Tool

Suitable for use on upholstery and carpeted stairs. Perfect for reaching into crevices.



Open the hose connection port cover.




Push the hose end and hose solution connector into the hose connection port.




Select the SpinScrub or 2-in-1 Antimicrobial tool. Slide the tool over the tab at the end of the hose until it clicks into place.



Plug the machine into the mains and press the On/Off pedal to switch on.

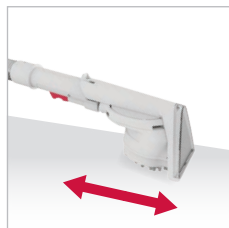

Press the trigger on the forward stroke to release water/solution. Release the trigger on the backward stroke to pick up water/solution. For a dryer finish continue using dry strokes (trigger released) until little water is visibly passing through the tool.

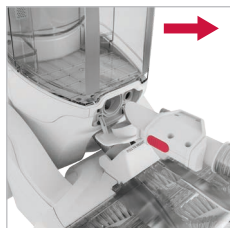

To remove the hose press the hose release clip on the end of the hose and pull to remove.



Always close the hose connection port cover after using the hose. The machine may lose suction if it is not closed properly.

**CAUTION:** Always switch off and unplug the machine before performing any maintenance/troubleshooting checks.

The dirty water tank is fitted with a float. When the dirty water tank is full or the floorhead is not in contact with the carpet, the float will activate by shutting off the suction on the machine. This will be noticeable as the motor noise on the machine will increase. If the float has been activated empty the dirty water tank if it is full.

If the dirty water tank is not full turn off the machine at the power switch and wait for the float to settle before restarting your machine.

Empty and rinse out the clean and dirty water tanks and leave to air dry before replacing.

Do not leave solution stored in the tanks between uses.

**IMPORTANT:** The motor is equipped with a thermal cut-out. If for any reason the machine should overheat, the thermostat will automatically turn the machine off. Switch off and unplug the machine. Check the machine for blockages and clean the dirty water tank filter.


## Emptying and cleaning the dirty water tank



Squeeze the dirty water tank handle and pull to remove.




Unhook and lift the dirty water tank clip to release the lid.

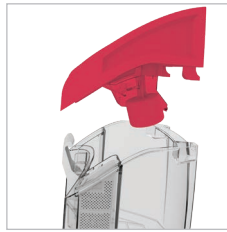


Lift the lid to remove.




Empty the dirty water tank over the sink. Rinse under warm water (max 40°C) to remove dirt/debris.

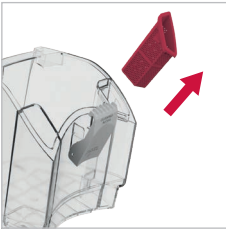

Slide the filter out of the dirty water tank.

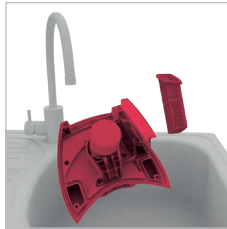

Rinse the filter and dirty water tank lid under warm water (max 40°C) to remove dirt/debris.

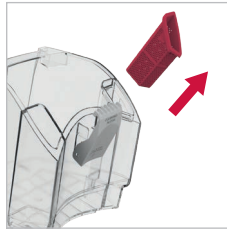

Slide the filter back into the dirty water tank.



To replace the lid, hook the tabs on the front of the lid into the front of the dirty water tank.



Push the clip up and press down onto the dirty water tank to secure the lid.



To replace the dirty water tank, tilt and line the front of the dirty water tank up onto the machine. Push back until it clicks into place.


# 12 MAINTENANCE

## Removing and cleaning the nozzle

**IMPORTANT:** Carpets should be dry vacuumed thoroughly before washing. This will prevent excessive build up of dirt/debris in the nozzle. If the nozzle is fitted incorrectly, this will cause poor dirty water pick up.




Remove both tanks and tilt the machine back.

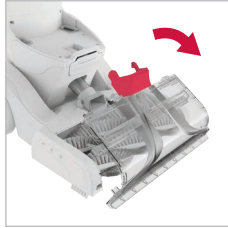

Lift the nozzle release clip and pull the nozzle forward to remove.



Rinse the nozzle under warm water (max 40°C) to remove dirt/debris.

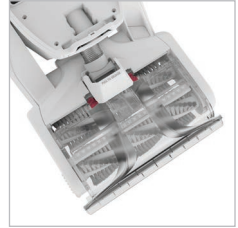

To replace the nozzle align the tabs at the top of the nozzle with the machine.




Push the nozzle backwards until it clicks into place.

## Removing and cleaning the brushbars



Remove both tanks and tilt the machine back.

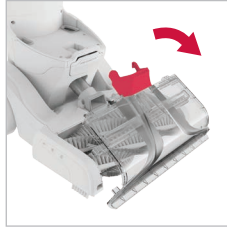

Lift the nozzle release clip and pull the nozzle forward to remove.



Pull the tabs up on the side of both brushbars to remove them.



Pull to remove the brushbars end caps.



Rinse the brushbars under warm water (max 40°C) to remove dirt/debris.



Replace the brushbars end caps.



To replace the brushbars, align the right side of the first brushbar onto the circular gearing. Push the left tab downwards until it clicks into place. Repeat the same process with the other brushbar.



To replace the nozzle align the tabs at the top of the nozzle with the machine.



Push the nozzle backwards until it clicks into place.

# 14 FAQs

**CAUTION:** Always unplug the machine before performing any maintenance/troubleshooting checks.

## Is there an accessory missing?

Check the contents on the box to make sure the part is definitely included with your machine.

## Why won't the machine turn on?

- The plug may not be fully pushed into the electrical socket.
- The fuse in the plug may need replacing. Always replace with a British 13amp fuse.
- The motor thermostat may have tripped. If this has happened, unplug the machine. Check the machine for blockages and clean the dirty water tank filter.

## Why won't the machine pick up?

- The float in the dirty water tank may have been activated. Empty the dirty water tank and wait for the float to settle before restarting your machine. **Go to Emptying and cleaning the dirty water tank.**
- Check the brushbars for blockages and clear. **Go to Removing and cleaning the brushbars.**
- The dirty water tank and/or lid may not be fitted correctly. **Go to Emptying and cleaning the dirty water tank.**
- Check the nozzle for blockages and clear. **Go to Removing and cleaning the nozzle.**
- Check the nozzle is correctly fitted. **Go to Removing and cleaning the nozzle.**
- Check the filter in the dirty water tank for dirt/debris. Remove and clean. **Go to Emptying and cleaning the dirty water tank.**
- The hose connector port cover maybe open, close and retry. **Go to Using the hose and tools.**

## Why won't the solution/clean water dispense?

- Make sure the solution and clean water tank is fitted securely. **Go to Filling the solution tank/Filling the clean water tank.**
- Dry mode may be activated, deactivate and retry. **Go to Using the machine.**
- Solution/water will only be delivered on the forward stroke. **Go to Using the machine.**
- The solution or clean water tank valve may be stuck. Hold the tank over the sink and press the valve underneath to release.
- The solution or clean water tank is empty. Refill the tank. **Go to Filling the solution tank/Filling the clean water tank.**

## Why won't the solution/clean water dispense when using the hose?

- Make sure the solution and clean water tank is fitted securely. **Go to Filling the solution tank/Filling the clean water tank.**
- Dry mode may be activated, deactivate and retry. **Go to Using the machine.**
- Trigger on the hose may not be depressed. **Go to Using the hose and tools.**
- The solution or clean water tank valve may be stuck. Hold the tank over the sink and press the valve underneath to release.
- The solution or clean water tank is empty. Refill the tank. **Go to Filling the solution tank/Filling the clean water tank.**

## Why won't the brushbars spin?

- The brushes will only spin when the machine is reclined.
- Check the brushbars are correctly fitted. **Go to Removing and cleaning the brushbars.**
- Check the brushbars for blockages and clear. **Go to Removing and cleaning the brushbars.**
- Check for damage to the brushbars.

**تنبيه:** احرص دائمًا على فصل الجهاز عن مصدر التيار الكهربائي قبل إجراء أي فحوصات صيانة/استكشاف الأعطال و إصلاحها.

## هل هناك قطعة ملحقة مفقودة؟

افحص المحتويات الموجودة على الصندوق للتأكد من أن جميع القطع مضمنة قطعًا مع الجهاز.

## ما سبب تعذر تشغيل الجهاز؟

- قد لا يتم دفع القابض تمامًا في المقبض الكهربائي.
- قد يكون المصهر الموجود في القابض بحاجة للاستبدال. استبدلهدومًا بمصهر بريطاني 13 أمبير.
- ربما يكون قد تم فصل ثرموستات الموتور. إذا حدث هذا، فافصل الجهاز. افحصالجهاز بحثًا عن انسدادات و نظف فلتر خزان الماء المتسخ.

## لماذا لا يلتقط الجهاز الأوساخ؟

- قد يكون الجسم العائم في خزان الماء المتسخ في حالة نشطة. أفرغ خزان الماء المتسخ وانتظر حتى يستقر الجسم العائم قبل إعادة تشغيل الجهاز. انتقل إلى "إفراغ وتنظيف خزان الماء المتسخ".
- افحص قضيب الفرشاة للتأكد من خلوهما من أي انسدادات وقم بإزالتها إن وُجدت. انتقل إلى "خلع وتنظيف قضيب الفرشاة".
- ربما لم يتم تركيب خزان الماء المتسخ بشكل صحيح. انتقل إلى "إفراغ وتنظيف خزان الماء المتسخ".
- افحص الفوهة للتأكد من خلوهما من أي انسدادات وقم بإزالتها إن وُجدت. انتقل إلى "إزالة الفوهة وتنظيفها".
- تأكد من تركيب الفوهة بشكل صحيح. انتقل إلى "إزالة الفوهة وتنظيفها".
- افحص الفلتر الموجود في خزان الماء المتسخ للتأكد من خلوه من الأوساخ والبقايا. الإزالة والتنظيف. انتقل إلى "إفراغ وتنظيف خزان الماء المتسخ".
- ربما يكون غطاء منفذ توصيل الخرطوم مفتوحًا، أغلقه وأعد المحاولة. انتقل إلى "استخدام الخرطوم والأدوات".

## ما سبب عدم إخراج المحلول/الماء النظيف؟

- تأكد من تركيب خزان المحلول والماء النظيف بإحكام. انتقل إلى "ملء خزان المحلول/ ملء خزان الماء النظيف".
- قد يتم تنشيط وضع التجفيف، قم بإلغاء تنشيطه وأعد المحاولة. انتقل إلى "استخدام الجهاز".
- سيتم توصيل المحلول/الماء في الحركة الأمامية. انتقل إلى "استخدام الجهاز".
- قد يكون صمام خزان المحلول أو الماء النظيف عالقًا. احمّل الخزان فوق الحوض واضغط على الصمام الموجود أسفله لإخراج الماء.
- قد يكون خزان المحلول أو الماء النظيف فارغًا.. أعد ملء الخزان. انتقل إلى "ملء خزان المحلول/ ملء خزان الماء النظيف".

## ما سبب عدم إخراج المحلول/الماء النظيف عند استخدام الخرطوم؟

- تأكد من تركيب خزان المحلول والماء النظيف بإحكام. انتقل إلى "ملء خزان المحلول/ ملء خزان الماء النظيف".
- قد يتم تنشيط وضع التجفيف، قم بإلغاء تنشيطه وأعد المحاولة. انتقل إلى "استخدام الجهاز".
- ربما لم يتم الضغط على الزر الموجود على الخرطوم. انتقل إلى "استخدام الخرطوم والأدوات".
- قد يكون صمام خزان المحلول أو الماء النظيف عالقًا. احمّل الخزان فوق الحوض واضغط على الصمام الموجود أسفله لإخراج الماء.
- قد يكون خزان المحلول أو الماء النظيف فارغًا.. أعد ملء الخزان. انتقل إلى "ملء خزان المحلول/ ملء خزان الماء النظيف".

## ما سبب تعذر دوران قضيب الفرشاة؟

- تدور الفرش فقط في حالة إمالة الجهاز.
- تأكد من تركيب قضيب الفرشاة بشكل صحيح. انتقل إلى "خلع وتنظيف قضيب الفرشاة".
- افحص قضيب الفرشاة للتأكد من خلوهما من أي انسدادات وقم بإزالتها إن وُجدت. انتقل إلى "خلع وتنظيف قضيب الفرشاة".
- افحص قضيب الفرشاة للتأكد من خلوهما من التلف.

# 13 الصيانة


إزالة قضيبى الفرشاة وتنظيفهما



اسحب لإخراج أغطية رؤوس  
قضيبى الفرشاة.



اسحب الألسنة الموجودة  
على جانب كلا قضيبى  
الفرشاة لأعلى لإخراجها.

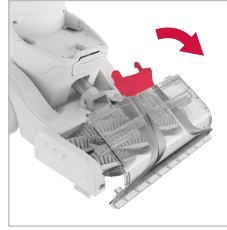

ارفع مشبك تحرير الفوهة  
واسحب الفوهة للأمام  
ليزالتها.



اخلع الخزانين وأمل الجهاز  
إلى الخلف.



لإعادة تركيب قضيبى الفرشاة، حاذ الجانب الأيمن لقضيب  
الفرشاة الأول مع التروس الدائرية. اضغط على اللسان  
الأيسر للأسفل حتى يستقر في مكانه. كرر نفس العملية  
مع قضيب الفرشاة الآخر.




أعد تركيب أغطية رؤوس  
قضيبى الفرشاة.



اغسل قضيبى الفرشاة  
بالماء الدافئ (بحد أقصى  
40°سيلزيوس) للتخلص من  
الأوساخ/البقايا.



ادفع الفوهة للخلف حتى  
تستقر في مكانها.

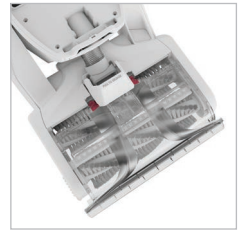

لإعادة تركيب الفوهة، حاذ  
الألسنة الموجودة على  
الجزء العلوي للفوهة مع  
الجهاز.




**معلومة مهمة:** يجب تنظيف السجاد بواسطة المكنسة الكهربائية جيدًا قبل غسله. سوف يمنع ذلك تراكم الأوساخ/البقايا بداخل الفوهة. إذا لم يتم تركيب الفوهة على نحو صحيح، فسيؤدي ذلك إلى ضعف امتصاص الماء المتسخ.



لإعادة تركيب الفوهة، حاذ الألسنة الموجودة على الجزء العلوي للفوهة مع الجهاز.



اغسل الفوهة بالماء الدافئ (بحد أقصى 40° سيلزيوس) للتخلص من الأوساخ/البقايا.

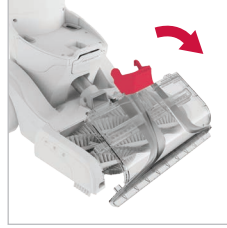

ارفع مشبك تحرير الفوهة واسحب الفوهة للأمام لإزالتها.



ادفع الفوهة إلى الخلف وأمل الجهاز إلى الخلف.



ادفع الفوهة للخلف حتى تستقر في مكانها.

# 11 الصيانة

**تنبيه:** احرص دائماً على إيقاف تشغيل الجهاز وفصله عن مصدر التيار الكهربائي قبل إجراء أي فحوصات صيانة/ استكشاف الأعطال وإصلاحها.

إن خزان الماء المتسخ مزود بجسم عائم. وعندما يمتلئ هذا الخزان عن آخره، أو لا يكون رأس الأرضية ملامسًا للسجادة، ينشط هذا الجسم العائم عن طريق إغلاق وظيفة الشفط في الجهاز. سيكون ذلك ملحوظًا حيث سيزداد صوت ضجيج محرك الجهاز. إذا تم تنشيط الجسم العائم، فأفرغ خزان الماء المتسخ إذا كان ممتلئًا.

إذا لم يكن الخزان ممتلئًا، فأوقف تشغيل الجهاز بواسطة مفتاح التشغيل وانتظر حتى يستقر الجسم العائم قبل إعادة تشغيل جهازك.


قم بإفراغ وشطف خزانات الماء النظيف والمتسخ واتركها لتجف في الهواء قبل إعادتها إلى الغسالة. لا تترك المحلول بداخل الخزانات بين مرات استعمال الجهاز.

**معلومة مهمة:** إن الموتور مزود بألية فصل حرارية. في حالة زيادة سخونة الجهاز لأي سبب من الأسباب، فيقوم الترموستات بإيقاف تشغيل الجهاز تلقائيًا. أوقف تشغيل الجهاز وانزع القابس. افصلالجهاز بحثًا عن أي انسدادات و نظّف فلتر خزان الماء المتسخ

## إفراغ وتنظيف خزان الماء المتسخ



أفرغ خزان الماء المتسخ في الحوض. اغسله بالماء الدافئ (بحد أقصى 40° سيلزيوس) للتخلص من الأوساخ/البقايا.

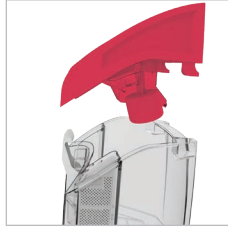

ارفع غطاء الخزان ليتم خلعه.




افصل خطاف مشبك خزان الماء المتسخ وارفعه لتحرير الغطاء.




اضغط على مقبض خزان الماء المتسخ واسحب ليتم خلعه.




لإعادة تركيب الغطاء، ثبت الألسنة الموجودة على الجزء الأمامي للغطاء على الجزء الأمامي لخزان الماء المتسخ.

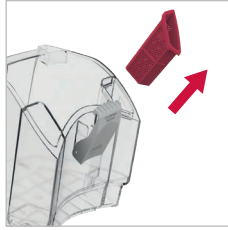

حرّك الفلتر خارج خزان الماء المتسخ. حرّك الفلتر مرة أخرى إلى داخل خزان الماء المتسخ.

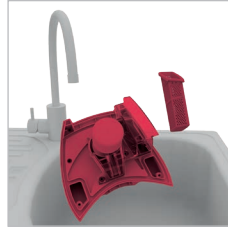

اغسل خزان الماء المتسخ والغطاء بالماء الدافئ (في درجة حرارة تبلغ بحد أقصى 40° سيلزيوس) للتخلص من الأوساخ/البقايا.

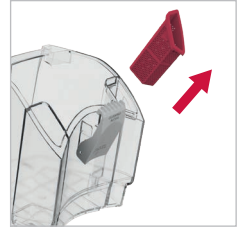

حرّك الفلتر خارج خزان الماء المتسخ.



ولإعادة تركيب خزان الماء المتسخ، قم بإمالة الجزء الأمامي لخزان الماء المتسخ ومحاذاته مع الجهاز. اضغط عليه للخلف حتى يستقر في مكانه بإحكام.



ادفع المشبك لأعلى واضغط للأسفل على خزان الماء المتسخ لتثبيت الغطاء.

**معلومة مهمة:** يجب أن يكون الجهاز في وضع قائم عند استخدام الخرطوم والأدوات، حيث سيؤدي ذلك إلى تعطيل الفرش. لتجنب غمر السجاد، لا تستخدم أكثر من ٤ أشواط تبليل على أي جزء واحد. أنه التنظيف دومًا بأشواط تجفيف (تحرير الزر).



### أداة مضادة للميكروبات 1x2

مناسبة للاستخدام على قماش التنجيد والدرج المغطى بالسجاد. مثالية للوصول إلى الشقوق.




### أداة المنظف الدوار اليدوية

مناسبة لاستهداف البقع والعلامات الصعبة على المفارش والسجاد.




حدد أداة المنظف الدوار أو الأداة المضادة للميكروبات 1x2. حرك الأداة فوق المقبض الصغير الموجود عند طرف الخرطوم حتى تستقر في مكانها بإحكام.

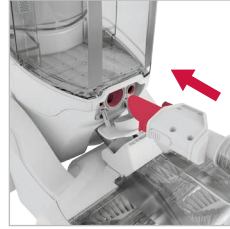


اضغط على طرف الخرطوم وموصل محلول الخرطوم لإدخاله في منفذ توصيل الخرطوم.




افتح غطاء منفذ توصيل الخرطوم.

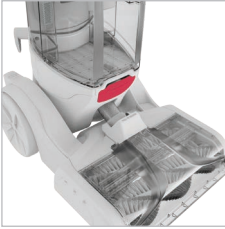

احرص دائمًا على إغلاق غطاء منفذ توصيل الخرطوم بعد استخدام الخرطوم. قد يفقد الجهاز قوة الشفط إذا لم يتم إغلاقه بشكل صحيح.

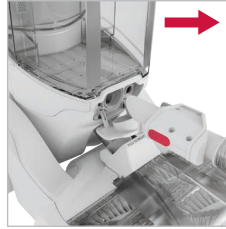

لإزالة الخرطوم، اضغط على مشبك تحرير الخرطوم الموجود على طرف الخرطوم واسحب لإزالته.

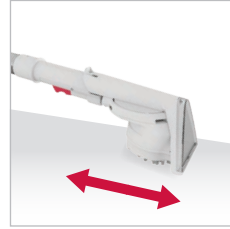

اضغط على الزر الموجود على الحركة الأمامية لإخراج الماء/المحلول. حرر الزر الموجود على الحركة الخلفية لامتناس الماء/المحلول.

لإنهاء التجفيف، استمر في استخدام أشواط التجفيف (تحرير الزر) حتى يمر القليل من الماء بشكل واضح عبر الأداة.



وَصِّل الجهاز بمصدر التيار الكهربائي، واضغط على دواسة التشغيل/الإيقاف لتشغيله.

## 9 التشغيل

### شطف السجادة

**معلومة مهمة:** خطوة اختيارية. لاستخراج أي محلول متبق من سجادتك، اشطف السجاد بالماء فقط.



اسحب الجهاز ببطء إلى الخلف لامتصاص الماء.




سوف يُضيء مؤشر الوضع **WASH** (الغسيل) في الشوط الأمامي.



ادفع الجهاز إلى الأمام ببطء. ستبدأ الفرش في الدوران وسيتم توزيع الماء فقط تلقائيًا.



للشطف، اسحب خزان المحلول للأعلى وارفعه لإزالته.

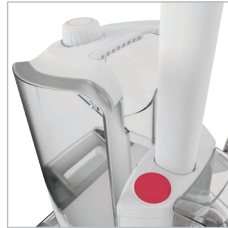

لإنهاء التجفيف، اضغط على زر التجفيف فقط لإيقاف توصيل الماء. استمر في استخدام أشواط التجفيف حتى يمر القليل من الماء بشكل واضح عبر الفوهة.



سوف يُضيء مؤشر الوضع **DRY** (التجفيف) على الحركة الخلفية.

**تنبيه:** يدور قضيبا الفرشاة باستمرار عند تشغيل الجهاز وإمالته. لا تستخدم قضيبا الفرشاة في موضع واحد فوق أي سطح لفترة زمنية طويلة، لأنهما قد يتسببا في إتلاف سطح الأرضية.

**معلومة مهمة:** يجب تنظيف السجاد بواسطة المكنسة الكهربائية جيدًا قبل غسله. بالنسبة للأجزاء شديدة الاتساخ، قد يتطلب الأمر تكرار عملية التنظيف. قم بإجراء أشواط متقاطعة على النقش الأصلي مع جعل جولات الحركة متداخلة مع بعضها بعضًا. لا تغمر السجاد بشكل زائد.



سوف يُضيء مؤشر  
الوضع WASH (الغسيل)  
في الشوط الأمامي.



ادفع الجهاز إلى الأمام  
ببطء. يتم توزيع الماء/  
المحلول تلقائيًا.



اضغط على دواسة تحرير  
المقبض واسحبه إلى  
الخلف لإمالة الجهاز. سوف  
تبدأ الفرش في الدوران.



وصّل الجهاز بمصدر التيار  
الكهربائي، واضغط على  
دواسة التشغيل/الإيقاف  
لتشغيله.



لإنهاء التجفيف، اضغط على  
زر التجفيف فقط لإيقاف  
توصيل الماء. استمر في  
استخدام أشواط التجفيف  
حتى يمر القليل من الماء  
بشكل واضح عبر الفوهة.



سوف يُضيء مؤشر  
الوضع DRY (التجفيف)  
على الحركة الخلفية.



اسحب الجهاز ببطء إلى  
الخلف لامتصاص الماء /  
المحلول.

## 7 التشغيل

### ملء خزان المحلول

**معلومة مهمة:** اإغلق الغطاء بإحكام عند إعادة تركيب الخزان. لا تترك المحلول بداخل الخزانات بين مرات استعمال الجهاز. يمكن سكب المحلول غير المستخدم مرة أخرى في الزجاجة.



ادر غطاء خزان المحلول  
باتجاه عقارب الساعة  
لاحكام ربطه.



إملأ خزان المحلول بمحلول  
هوفر لتنظيف السجاد.



أدر غطاء خزان المحلول  
في عكس اتجاه عقارب  
الساعة وقم بإزالته.




اسحب خزان المحلول  
للأعلى وارفعه لإزالته.



لاستبدال خزان المحلول،  
حركه و ادفعه بإحكام في  
الجهاز.

### ملء خزان الماء النظيف

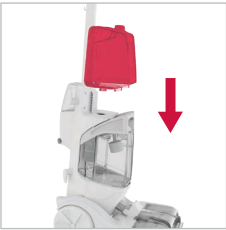


لاستبدال خزان الماء  
النظيف، اضبط محاذاة  
خزان الماء النظيف مع  
هيكل الجهاز. حركه للأسفل  
واضغط عليه بقوة لتثبيته  
في مكانه.



املأ خزان الماء النظيف  
بماء دافئ (بحد أقصى  
04°سيلزيوس).



أدر غطاء خزان الماء  
النظيف في عكس اتجاه  
عقارب الساعة وقم بإزالته.

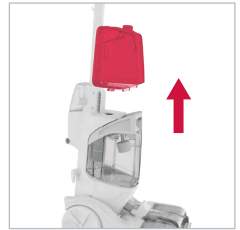


حرك لأعلى وارفع لإزالة  
خزان الماء النظيف.

## الرجاء قراءة قسم "معلومات السلامة المهمة" قبل البدء في استخدام هذا الجهاز


**معلومة مهمة:** يجب تنظيف السجاد بواسطة المكبسة الكهربائية جيدًا قبل غسله.

- اختبار ثبات الألوان - بلل قطعة قماش بيضاء شديدة الامتصاص بالمحلول. استخدم قطعة القماش المبللة في فرك جزء صغير ومخفي من السجادة/المفرش/قماش التنجيد برفق. انتظر عشر دقائق وافحص اللون للتحقق من عدم إزالته أو تغييره باستخدام منشفة ورقية أو قطعة قماش بيضاء. افحص جميع السجاد/المفرش/أقمشة التنجيد قبل أول استخدام وإذا كانت السجادة بأكثر من لون واحد، فافحص جميع الألوان.
- اختبر جميع الأرضيات / السجاد/ المفارش قبل الاستخدام الأول. شغل الجهاز على جزء صغير مخفي. وإذا لم يحدث أي تلف أو تشوه لوبرة النسيج، فواصل التنظيف.
- ينبغي دائمًا مراعاة احتياطات الأمان الأساسية عند استخدام الجهاز. لا تغمر السجاد بشكل زائد واستمر في استخدام أسواط التجفيف حتى يمر القليل من الماء بشكل واضح عبر الفوهة. عند استخدام الخرطوم والأدوات، أنه التنظيف دومًا باحد أسواط التجفيف.
- عند تنظيف الغرفة بالكامل، انقل الأثاث خارج المنطقة التي سيتم تنظيفها. وإذا تعذر نقل الأثاث، فضع رقائق الألومنيوم أو ورق الشمع أسفل السيقان. حيث يحول ذلك دون إحداث الطبقة الخارجية للأرضيات الخشبية بقع على السجاد. ارفع الحاشية القماشية للأثاث والستائر.
- استخدم فقط محلول السجاد من هوفر. فقد يؤدي استخدام المحاليل الأخرى إلى تكوين رغوة زائدة وإبطال الضمان.
- بالنسبة للأجزاء شديدة الاتساخ، قد يتطلب الأمر تكرار عملية التنظيف. قم بإجراء أسواط متقاطعة على النقش الأصلي مع جعل جولات الحركة متداخلة مع بعضها بعضًا.
- يجب ملء خزان الماء النظيف بالماء الدافئ (يحد أقصى 40°سيلزيوس). سيؤدي ملء خزان الماء النظيف بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان.
- قم بإفراغ وشطف خزانات الماء النظيف والمتسخ واركبها لتجف في الهواء قبل التخزين. لا تترك المحلول بداخل الخزانات بين مرات استعمال الجهاز.
- هذا الجهاز قوي، لذلك تأكد قبل توصيله بمصدر التيار الكهربائي من إيقاف تشغيل جميع مفاتيح التحكم والإمسك بالجهاز بقوة عند بدء التشغيل وأثناء الاستخدام.

### التجميع

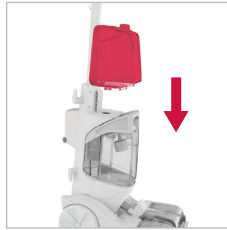

قم بمحاذاة خزان الماء النظيف مع هيكل الجهاز. حرّكه لأسفل واضغط عليه بقوة لتثبيته في مكانه.

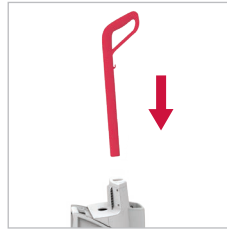


ادفع المقبض في الجسم الرئيسي حتى تسمع صوت طقطقة يدل على استقراره في مكانها.



أوقف قاعدة الجهاز فوق الأرضية في وضع قائم.


## 5 نظرة عامة على الجهاز

### الجهاز

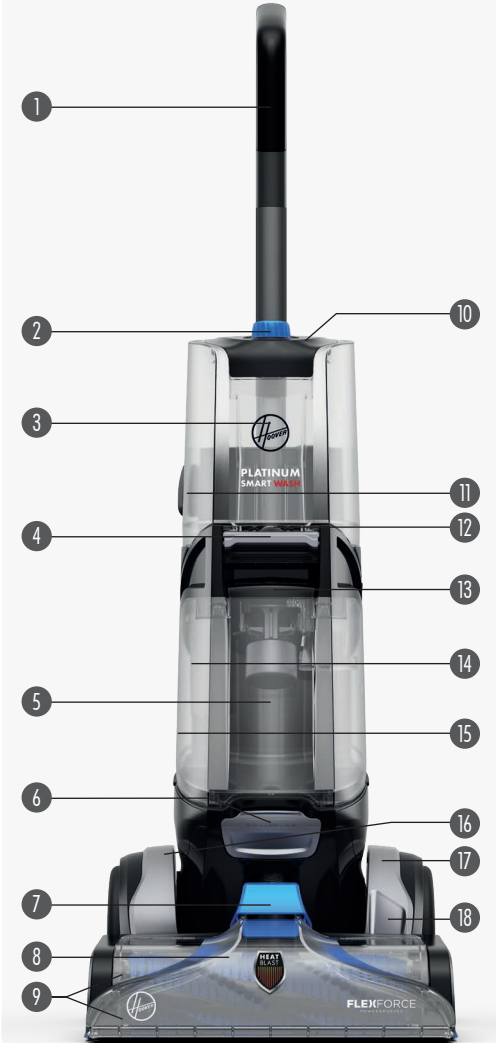

- 1 المقبض
- 2 غطاء خزان الماء النظيف
- 3 خزان الماء النظيف
- 4 مقبض خزان الماء المتسخ
- 5 خزان الماء المتسخ
- 6 غطاء منفذ توصيل الخرطوم
- 7 مشبك تحرير الفوهة
- 8 الفوهة
- 9 قضيبا الفرشاة
- 10 زر التجفيف فقط (مخفي)
- 11 خطاف تحرير السلك السريع (مخفي)
- 12 خزان المحلول (مخفي)
- 13 مقبض الحمل (مخفي)
- 14 فلتر خزان الماء المتسخ (مخفي)
- 15 خطاف تحرير السلك السريع (مخفي)
- 16 دواسة تحرير المقبض (مخفية)
- 17 دواسة الإيقاف/التشغيل (مخفية)
- 18 مؤشر وضع الغسيل/ التجفيف
- 19 خرطوم 2.5 م
- 20 عبوة محلول Platinum مضاد للبكتريا سعة 250مل
- 21 أداة المنظف الدوار اليدوية
- 22 أداة مضادة للميكروبات 1x2
- 23 حقيبة الملحقات

### الملحقات

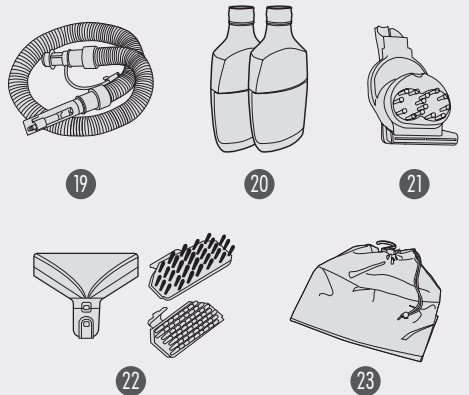



## الخدمة والمساعدة

إذا كانت لديك أي استفسارات أو مخاوف بشأن استخدام مكنسة غسيل السجاد من هوفر، فتفضل بزيارة الموقع [hoover.ae](http://hoover.ae)

## المستلزمات الاستهلاكية

لشراء قطع الغيار والملحقات، تفضل بزيارة موقعنا الإلكتروني: [hoover.ae](http://hoover.ae)  
إن استخدام قطع غيار هوفر الأصلية يساعد في الحفاظ على الأداء الأمثل وعلى سلامة ضمانك.

### CDCW-SWME

راجع لوحة المعايير الموجودة على الجهاز للتعرف على التفاصيل.  
راجع لوحة المعايير الموجودة على الجهاز للتعرف على التفاصيل.  
9 أمتار  
8.6 كجم

### المواصفات الفنية

الجهد الكهربائي  
القوة الكهربائية بالواط  
طول السلك  
الوزن

خاضع للتغيير الفني بدون إشعار.

© 2021 Techtronic Floor Care Technology Ltd

ينبغي ألا يتم التخلص من نفايات المنتجات الكهربائية عن طريق طرحها مع النفايات المنزلية.  
الرجاء إعادة تدويرها إن وجدت مراكز إعادة التدوير. راجع الأمر مع السلطة المحلية أو بائع التجزئة للحصول على النصائح المتعلقة بإعادة التدوير.

إن وجود هذه العلامة على المنتج (المنتجات) و/أو المستندات المصاحبة له يعني أن المعدات الكهربائية والإلكترونية المستعملة لا يجب الخلط بينها وبين النفايات المنزلية العامة. لإجراء أعمال الإصلاح والاسترداد وإعادة التدوير بشكل صحيح، من فضلك انقل هذا المنتج (هذه المنتجات) إلى نقاط التجميع المخصصة حيث سيتم قبوله دون أي تكلفة. إن التخلص من هذا المنتج بشكل صحيح سيساعد في توفير الموارد الثمينة ويمنع أي تأثيرات سلبية محتملة على صحة الإنسان والبيئة، والتي قد تنشأ نتيجة التعامل الخاطئ مع النفايات. الرجاء الاتصال بالسلطة المحلية للحصول على مزيد من التفاصيل حول أقرب نقطة تجميع مخصصة لك.



### 3 معلومات السلامة المهمة

- احتفظ بسلك الطاقة دومًا بعيدًا عن الفرش أثناء استخدام الجهاز.
- لا تستخدم سوى أسلاك إطالة معتمدة من CE بمعايرة 13 أمبيرًا لأن أسلاك الإطالة غير المعتمدة قد تؤدي إلى زيادة السخونة. ينبغي توخي الحذر لوضع سلك الإطالة بحيث يتم تجنب خطر التعثر فيه.
- استخدم الجهاز دومًا مع وجود جميع خزانات الماء والفلاتر في أماكنها.
- احتفظ بكل الفتحات خالية من الأوساخ؛ لأن ذلك قد يؤثر على تدفق الهواء/الشفط/امتصاص الماء.
- استخدم الجهاز دومًا في وضع قائم. للحيلولة دون تلف الموتور بسبب الماء المتسخ، لا تقلب الجهاز أبدًا رأسًا على عقب أو على جانبه.
- قم بتخزين الجهاز في منطقة جافة وباردة. قبل تخزين الجهاز، يُرجى التأكد من أن جميع خزانات الماء/المحلول والفلاتر نظيفة وجافة تمامًا.

#### احتياطات السلامة الأساسية

- لا تستخدم هذا الجهاز إلا في أماكن داخلية وحافظ على الإضاءة الجيدة في المنطقة التي تقوم بتنظيفها.
- أبعد أصابع اليد والشعر والملابس الفضفاضة بعيدًا عن الأجزاء المتحركة والفتحات أثناء استخدام الجهاز.
- قبل استخدام الجهاز، اختبر السجاد/المفارش/أقمشة التنجيد للتأكد من ثبات الألوان والكشف عن تشوه وبر النسيج.
- هذا الجهاز غير مخصص للاستخدام أو التنظيف بواسطة الأشخاص الذين يعانون من ضعف في القدرات البدنية أو الحسية أو العقلية، أو يفتقرون إلى الخبرة أو المعرفة، ما لم يتم إعطائهم تعليمات بشأن الاستخدام الآمن للجهاز من قبل شخص مسؤول قانونًا عن سلامتهم. يجب أن يخضعوا للإشراف أثناء استخدام الجهاز. لا يجوز للأطفال استخدام هذا الجهاز أو تنظيفه أو العبث به، ويجب حفظه بعيدًا عن متناول الأطفال في حالة عدم استخدامه.
- يجب استخدام الأدوات والمحلول الموصى به من هوفر فقط مع هذا الجهاز. حيث قد يؤدي استخدام المحاليل الأخرى إلى إبطال الضمان.

## معلومات السلامة المهمة

هذا الجهاز مخصص للاستخدام المنزلي فقط وليس للاستخدام التجاري أو الصناعي.

**الرجاء الاحتفاظ بالتعليمات من أجل استخدامها بعد ذلك ولا تستخدم هذا الجهاز إلا حسب التعليمات الواردة في هذا الدليل.**

• لا تترك الجهاز متصلًا بالكهرباء من دون إشراف.

• لا تستخدم الجهاز في حالة سقوطه أرضًا أو تلفه أو تركه في أماكن خارجية.

• لا تطأ سلك الطاقة بقدمك أو تستخدم الجهاز في حالة تلف سلك الطاقة أو قابس التيار الكهربائي. إذا تعرض سلك التيار الكهربائي للتلف، فيجب استبداله بواسطة شخص مؤهل لتجنب وقوع أي مخاطر.

• لا تستخدم الجهاز لالتقاط أي مواد قابلة للاشتعال أو قابلة للاحتراق (سائل الولاغات، البنزين،

الكيروسين، وما إلى ذلك) أو تستخدمه في مكان تنتشر به الأبخرة أو السوائل القابلة للانفجار.

• لا تمسك بالقابس أو تستخدم الجهاز بيدتين مبللتين.

• لا تسحب الجهاز أو تنقله بواسطة سلك الطاقة.

• لا تستخدم الجهاز في التقاط أعقاب جمرات الفحم المشتعلة أو أعقاب السجائر أو عيدان الثقاب أو الأشياء المشتعلة التي ينبعث الدخان منها ولا تستخدمه في منطقة قد تكون بها سوائل ضارة (مثل الكلور ووسائل التبييض ومنقي الصرف من الأمونيا).

• لا تستخدم سلك الطاقة كمقبض ولا تسحب سلك الطاقة حول الزوايا أو الحواف الحادة أو تغلق بابًا فوق سلك الطاقة.

• لا تفصل الجهاز عن طريق سحبه من سلك التيار الكهربائي.

• لا تحمل الجهاز بينما يكون قيد التشغيل.

• لا تحاول إزالة الانسدادات باستخدام أجسام حادة لأن ذلك قد يؤدي إلى إتلاف الجهاز. لا تُزل الانسدادات إلا حسب التعليمات الواردة في هذا الدليل.

• لا تستخدم الجهاز مع جهد غير صحيح لأن ذلك قد يؤدي إلى إتلافه أو إصابة المستخدم. يتم توضيح قيمة الجهد الكهربائي المناسب في لوحة المعايرة.

• لا تغمر الأرضيات بشكل زائد. أنه التنظيف دومًا بشوط جاف.

• استشر شركة تصنيع الأرضيات لديك قبل استخدام الجهاز.

• يجب ملء خزان الماء النظيف بالماء الدافئ (بحد أقصى 40°سيلزيوس) فقط.

• سيؤدي ملء الخزان بالماء الساخن أو المغلي إلى إتلاف الجهاز وإبطال الضمان.

• احرص دومًا على تنظيف الأرضيات بالمكنسة الكهربائية جيدًا قبل استخدام الجهاز.

• اختبر جميع السجاد/المفارش/أقمشة التنجيد قبل الاستخدام الكامل. شغل الجهاز على جزء صغير مخفي. وإذا لم يحدث أي تلف أو تشوه لوبرة النسيج، فواصل التنظيف.

• افصل الجهاز دومًا قبل إجراء أية أعمال صيانة وقبل توصيل أو فصل الخرطوم/الملحقات.

• افحص الجهاز والأدوات والملحقات دومًا للتأكد من خلوها من التلف والأوساخ والبقايا قبل استخدامها.

• توخ مزيدًا من الحذر عند التنظيف فوق السلام.

• احرص دائمًا على حماية سلك الطاقة من الأسطح الساخنة أو عند الاقتراب من السنة اللهب المكشوفة.

• أوقف تشغيل كل مفاتيح التحكم في الجهاز قبل فصل سلك الطاقة أو توصيله.

• قم دومًا بلف سلك الطاقة حول مشابك السلك المتوفرة عقب الاستخدام.



# PLATINUM SMART WASH

جهاز تنظيف السجاد التلقائي

دليل المستخدم



CDCW-SWME

hoover.ae